

# VSG/VSSG compact logix PLC

## Operation manual


FOR UNITS BUILT BEFORE JULY 1, 2013





## Important Note

---

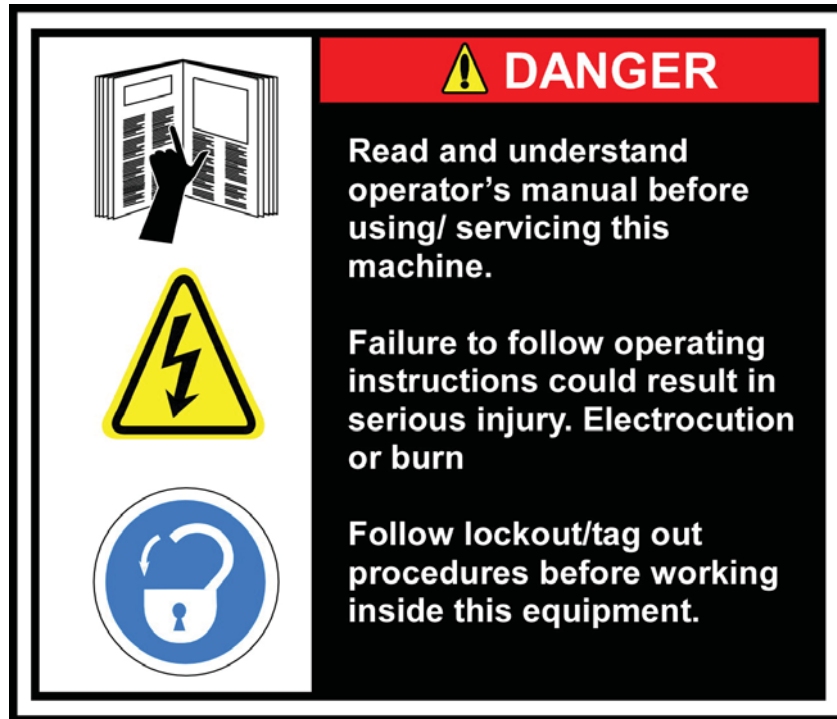

Before applying power to the control panel, all wiring to the panel shall be installed per NEC. Specifically check for proper voltage and that the neutral is grounded at the source. An equipment ground should also be run to the panel.

\* See Wiring Instructions and Diagrams before proceeding.

### NOTES:

- Before start-up you need to enter all system values and options, see section on Setpoint Values.
- Power circuits entry on left side of enclosure
- Instrument circuits entry on right side of enclosure

**Electrical installation shall be completed by a licensed electrician qualified in field wiring located in Class 1 Div 2 Hazardous Locations per the National Electric Code (NEC).**



## Table of Contents

---

Important Note .....	3
VSG/VSSG STANDARD VILTER WARRANTY STATEMENT .....	6
Operational Flow Charts .....	7
Main Screen.....	15
Log On Screen .....	16
Set Up Screen .....	17
Vilter Only Screen.....	19
Menu Screen .....	20
Compressor Alarm and Trip .....	24
Compressor Timer Setpoints .....	26
Compressor Control Setpoints.....	28
Additional Compressor Controls .....	33
Compressor Setpoints and Alarms .....	34
Motor Speed Setpoints & Control Screen .....	36
Diagnostics Force Output .....	38
Instrument Calibration .....	39
Oil Mixing Valve.....	45
Unit Start Screen (Start / Stop Logic).....	48
Device Names.....	51
Calibration Procedure of Optical Actuators .....	52
Calibration Procedure of Optical Actuators .....	53
Calibration Procedure of Optical Actuators .....	54
Installation Instructions For Replacement Of Optical Actuator .....	56
Slide Valve Actuator Theory of Operation .....	57
Slide Valve Actuator Troubleshooting Guide .....	58
Command Shaft Rotation and Travel.....	60
Safety Failure Message .....	62
Version Screen.....	65
Trend Charts.....	66
Captured Data at Shutdown .....	69

## VSG/VSSG STANDARD VILTER WARRANTY STATEMENT

---

Seller warrants all new single screw gas compression units and bareshaft single screw compressors manufactured by it and supplied to Buyer to be free from defects in materials and workmanship for a period of (a) eighteen (18) months from the date of shipment or (b) twelve (12) months from the date of installation at the end user's location, whichever occurs first.

If within such period any such product shall be proved to Seller's satisfaction to be defective, such product shall be repaired or replaced at Seller's option. Such repair or replacement shall be Seller's sole obligation and Buyer's exclusive remedy hereunder and shall be conditioned upon (a) Seller's receiving written notice of any alleged defect within ten (10) days after its discovery, (b) payment in full of all amounts owed by Buyer to Seller and (c) at Seller's option, Buyer shall have delivered such products to Seller, all expenses prepaid to its factory. Expenses incurred by Buyer in repairing or replacing any defective product (including, without limitation, labor, lost refrigerant or gas and freight costs) will not be allowed except by written permission of Seller. Further, Seller shall not be liable for any other direct, indirect, consequential, incidental, or special damages arising out of a breach of warranty.


This warranty is only applicable to products properly maintained and used according to Seller's instructions. This warranty does not apply (i) to ordinary wear and tear, damage caused by corrosion, misuse, overloading, neglect, improper use or operation (including, without limitation, operation beyond rated capacity), substitution of parts not approved by Seller, accident or alteration, as determined by Seller or (ii) if the product is operated on a gas with an H<sub>2</sub>S level above 100 PPM. In addition, Seller does not warrant that any equipment and features meet the requirements of any local, state or federal laws or regulations. Products supplied by Seller hereunder which are manufactured by someone else are not warranted by Seller in any way, but Seller agrees to assign to Buyer any warranty rights in such products that Seller may have from the original manufacturer. Labor and expenses for repair are not covered by warranty.

**THE WARRANTY CONTAINED HEREIN IS EXCLUSIVE AND IN LIEU OF ALL OTHER REPRESENTATIONS AND WARRANTIES, EXPRESS OR IMPLIED, AND SELLER EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**


Any description of the products, whether in writing or made orally by Seller or Seller's agents, specifications, samples, models, bulletins, drawings, diagrams, engineering sheets or similar materials used in connection with Buyer's order are for the sole purpose of identifying the products and shall not be construed as an express warranty. Any suggestions by Seller or Seller's agents regarding use, application or suitability of the products shall not be construed as an express warranty unless confirmed to be such in writing by Seller.

# Operational Flow Charts


## Requirements to Start Compressor

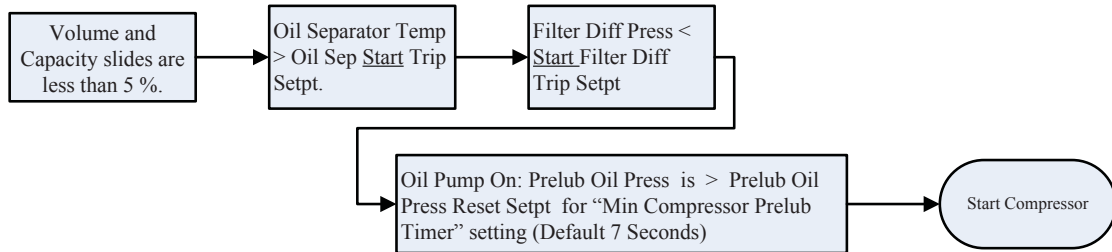


## Critical Compressor Run Logic @ Compressor Start

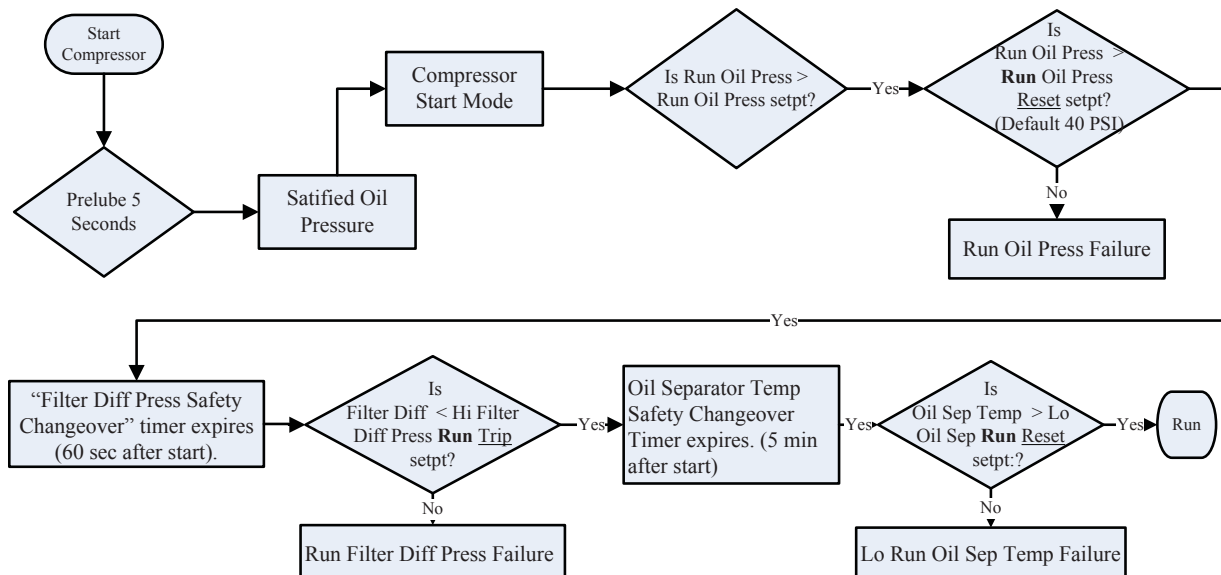

## Compressor Amperage Load Limiting

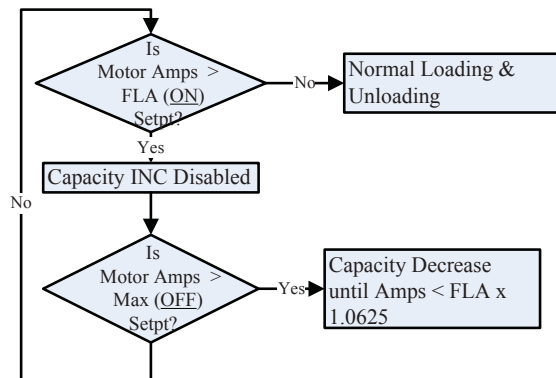


## High Disch Pressure Load Limit

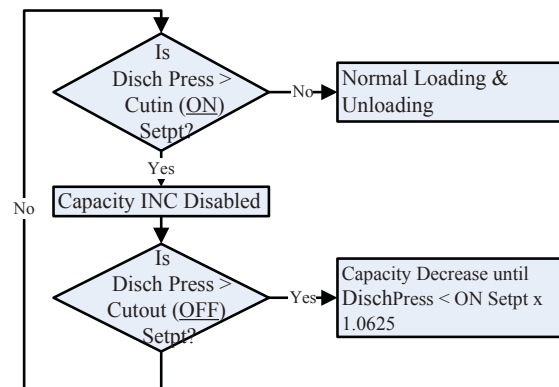


## Operational Flow Charts

**Suction Pressure Control**

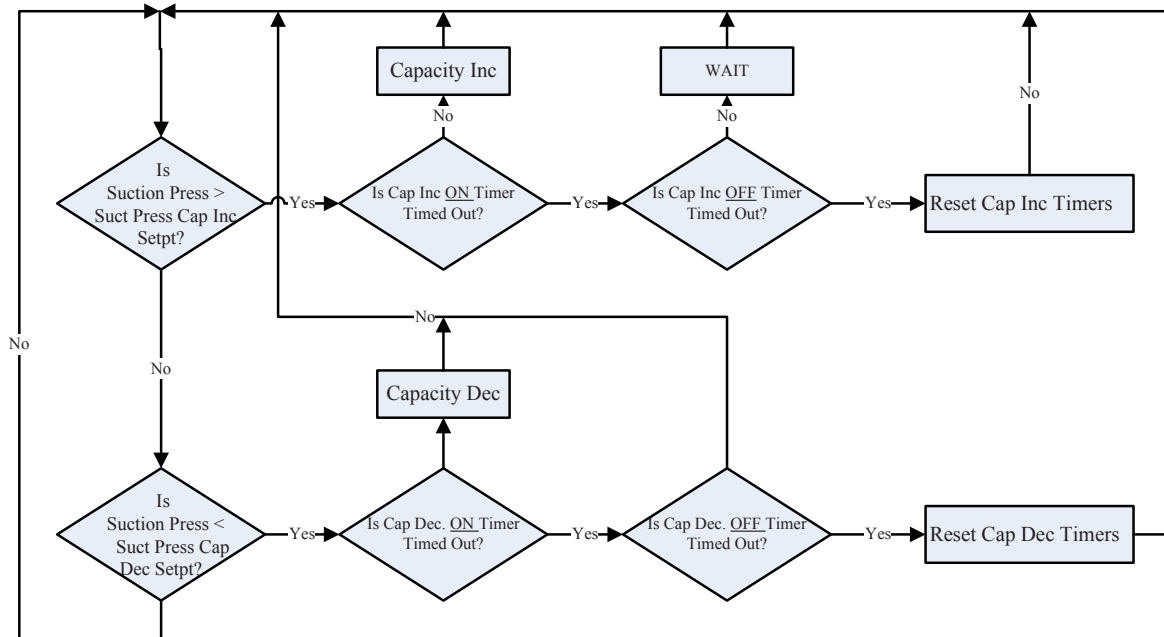


**Suction Pressure Safety**

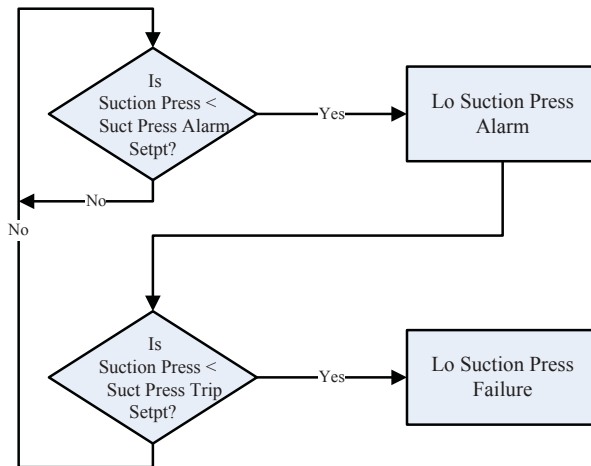




## Operational Flow Charts

**Oil Cooler Fan Control**  
(Selectable Control Optional)

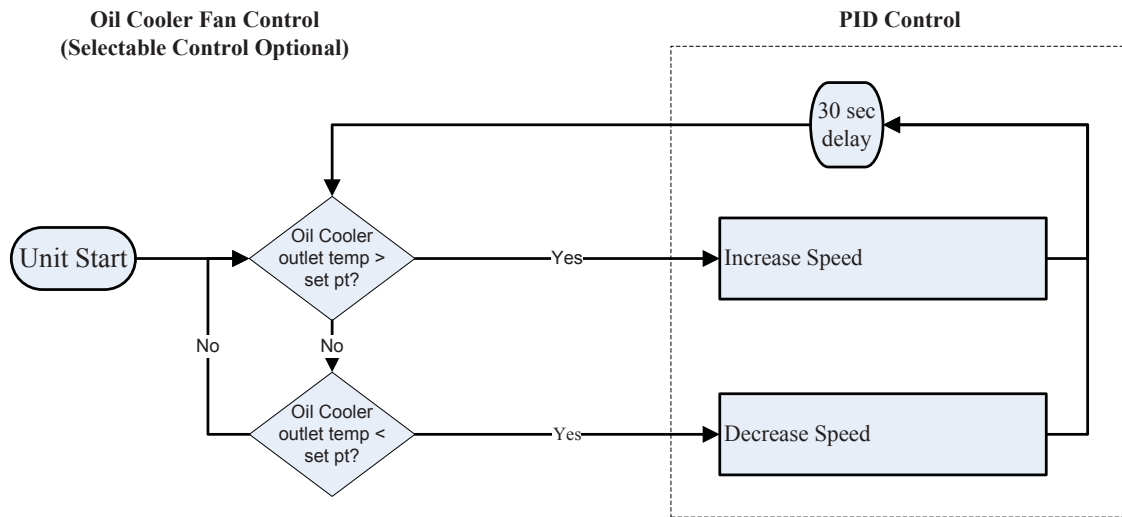


**Oil Temperature Control Valve**

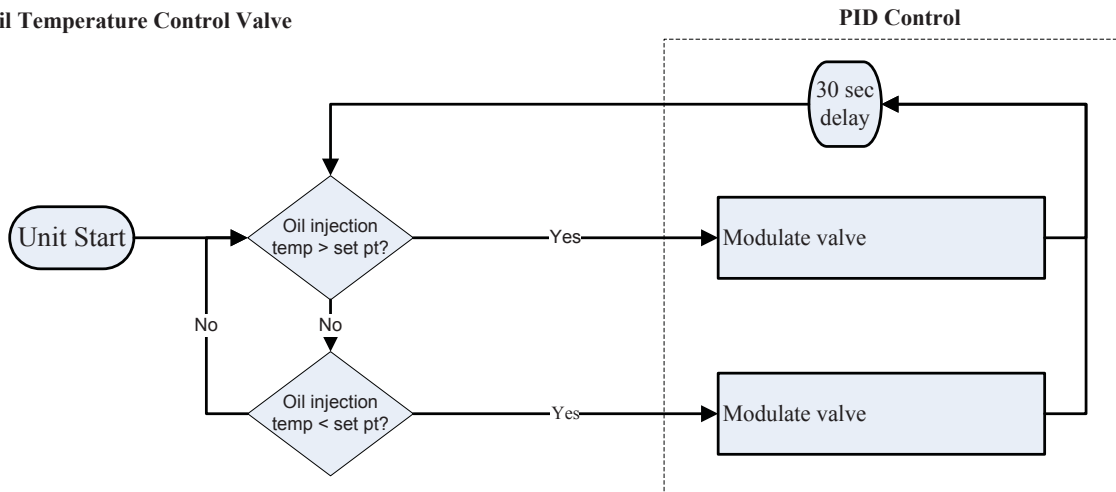


# Operational Flow Charts

## Delayed Lockout Timers

**WARNING: FOR THE FOLLOWING SHUTDOWNS, A DELAYED RESTART MAY OCCUR:**

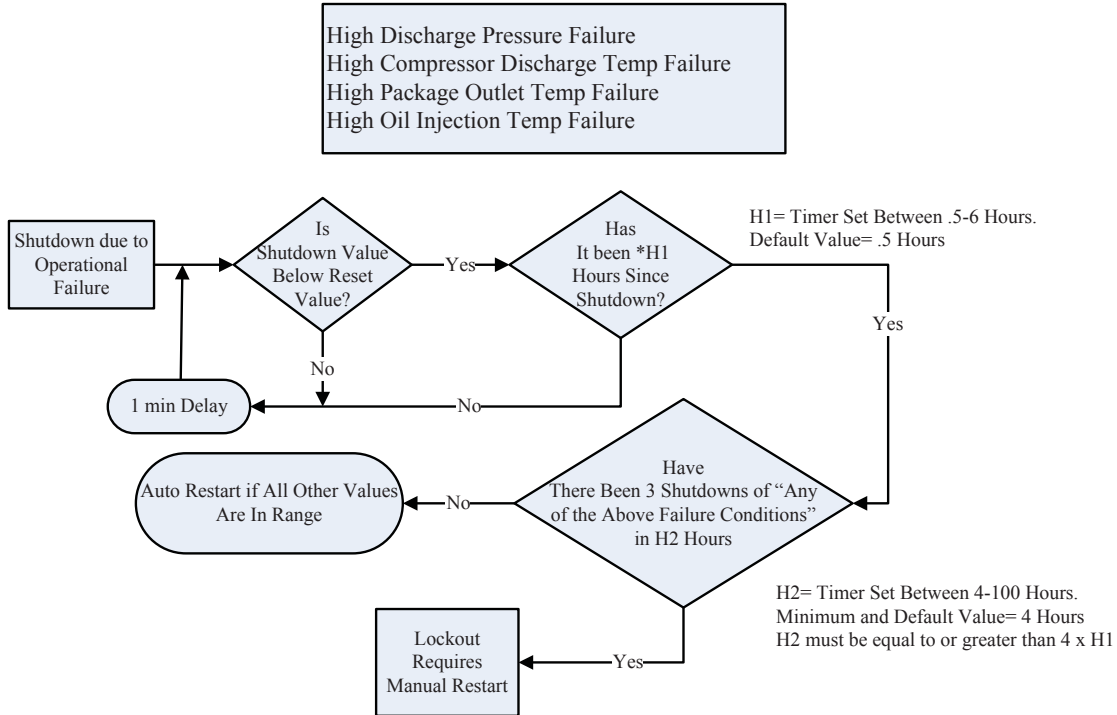


**WARNING: INCASE OF A POWER FAILURE A DELAYED RESTART MAY OCCUR:**

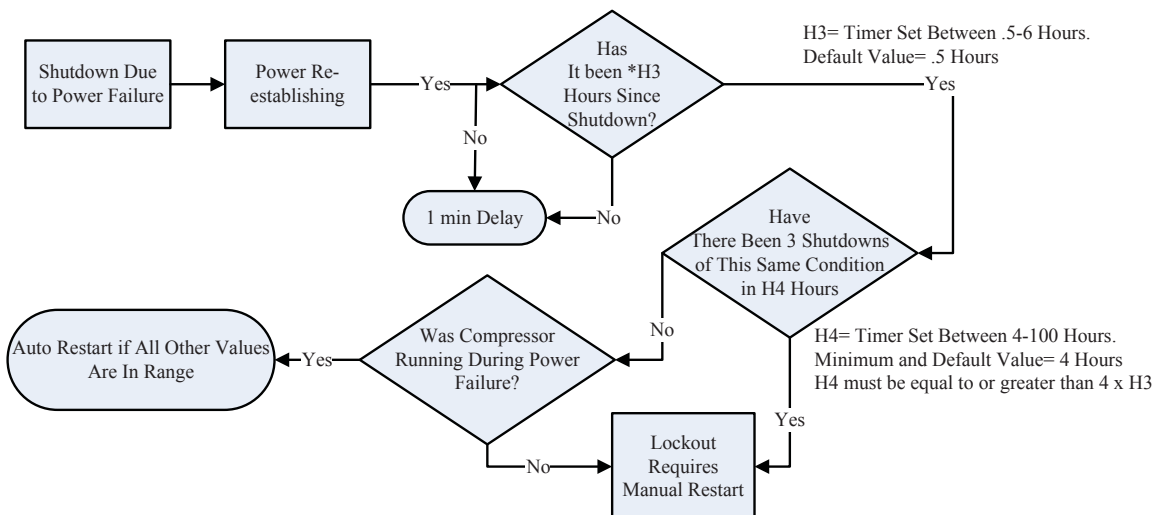


## Operational Flow Charts

Capacity Control Using Suction Pressure Control Setpoints

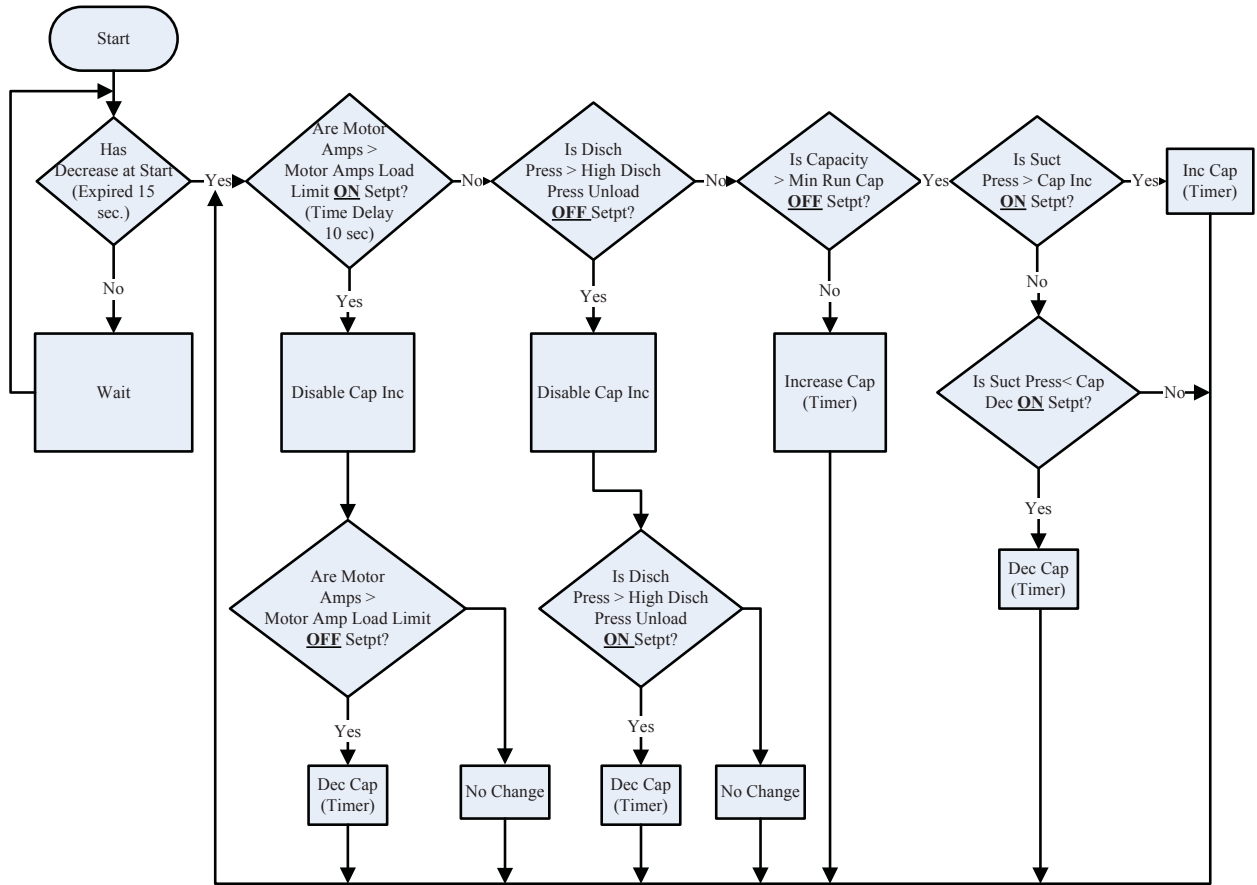


## Operational Flow Charts

### Capacity Control Using Discharge Pressure Control Setpoints

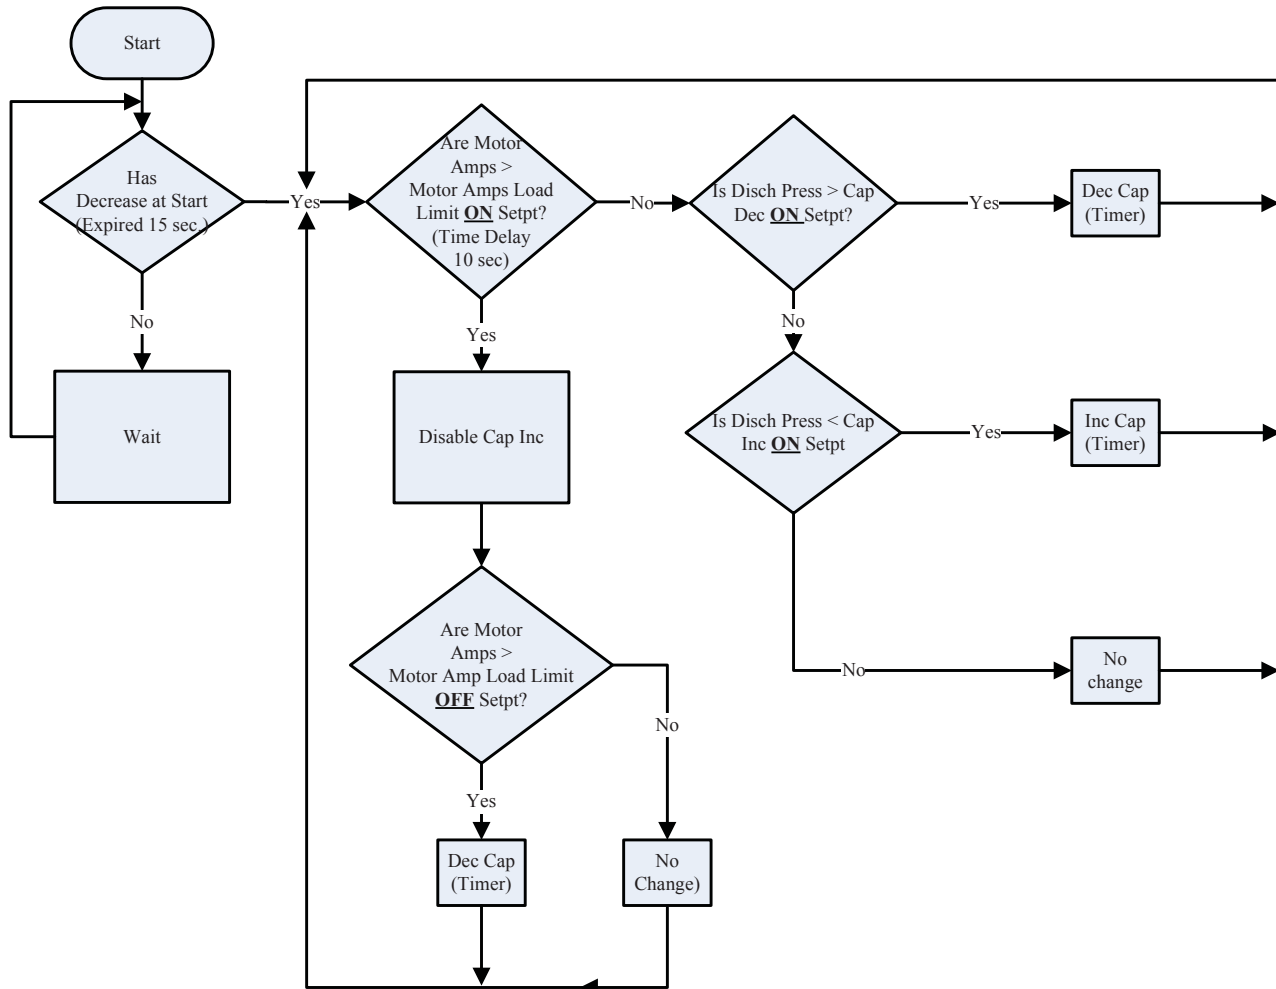

## Operational Flow Charts

### Compressor Operation with VFD Drive

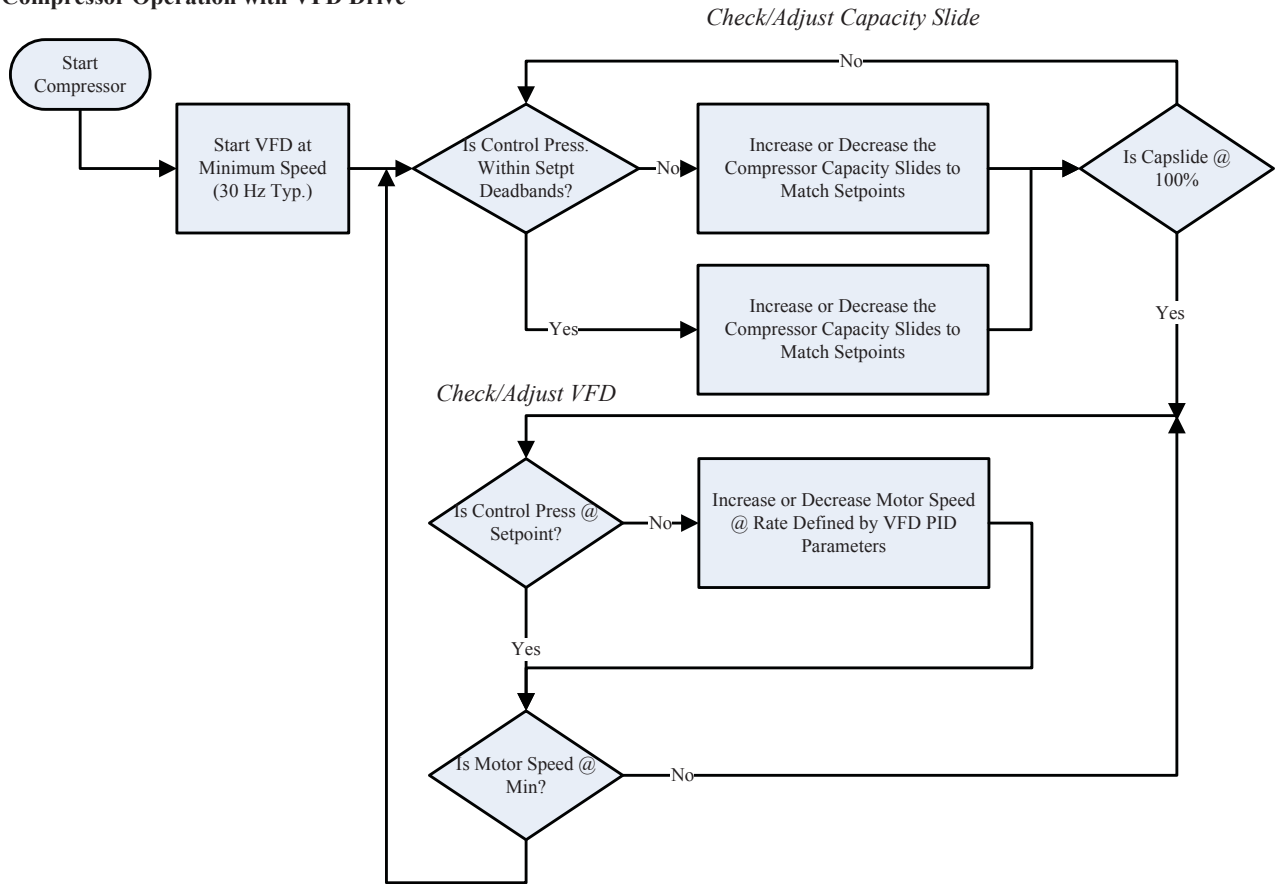



## Main Screen

### Main Screen

This screen has been designed to give the operator an overall view of all operating parameters affecting the compressor package. **This screen should always be displayed when maintenance items and setpoint items are not being performed.**

Status information such as Alarms and Trips are displayed on the screen.

This screen contains buttons to navigate to setpoint setup screens.


Status information on the compressor, oil pump, oil heater and run mode.

Start/Stop buttons.

Hour meter.

Motor amperage.

Compressor operating conditions.

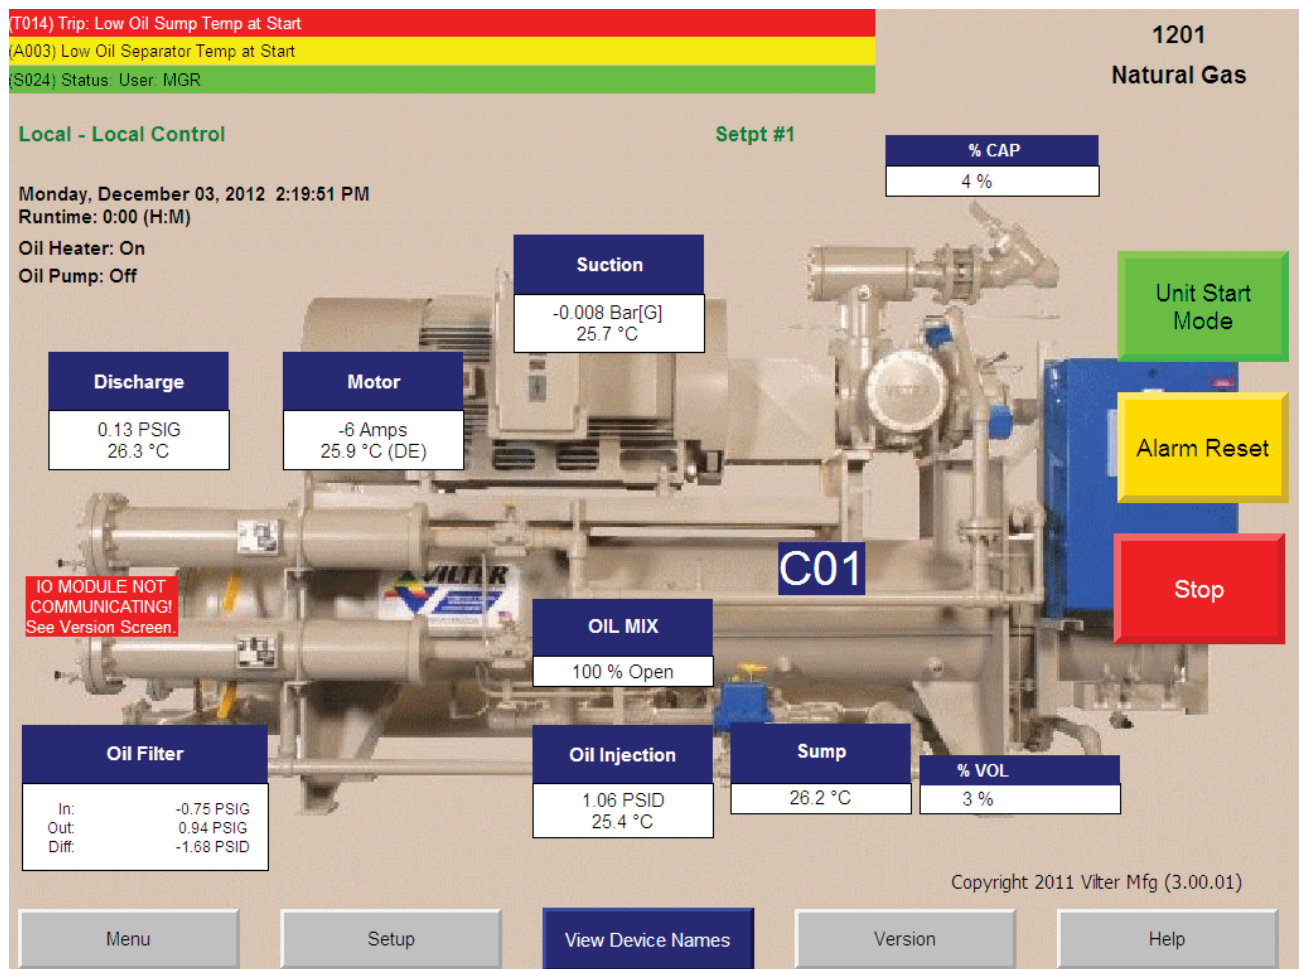

## Log On Screen

---

### Log On or Off

Press Log on Button and the below screen will appear. When altering setpoints, log on is necessary. Select appropriate user name and enter password to change/access setpoints.

To Log On: Enter your User Name (case sensitive) and Password (case sensitive) then touch the <\_| enter key.

To Log Off: Touch the Log Off button. This will return to the DEFAULT low-level user. The DEFAULT user may navigate to most screens but cannot change settings.

**Note:** An operator will be automatically logged off after 10 minutes of inactivity.

**Note:** The machine can be run and monitored without logging on. To change the setup or parameters of the machine, the operator must log on.

The image shows a login screen with a dark blue background. At the top, the word "Login:" is centered. Below it, there are two rows of input fields. The first row is labeled "User (F2)" on the left and has a right arrow button on the right. The second row is labeled "Password (F3)" on the left and has an "ESC" button on the right. Both input fields are empty and have a blue border.




## Set Up Screen


From the **Main** screen, touch the Setup button. After entering an authorized user name and password, the screen pictured below will appear.

Pressure units, Temperature units and Suction/ Discharge Pressure control configurations are list selectable.

To choose a configuration from a list: 1.) Touch the list. 2.) Touch the Up or Down Arrow to move the green cursor ">" along side of the desired configuration. 3.) Touch the Enter button. This will highlight-green the chosen configuration.

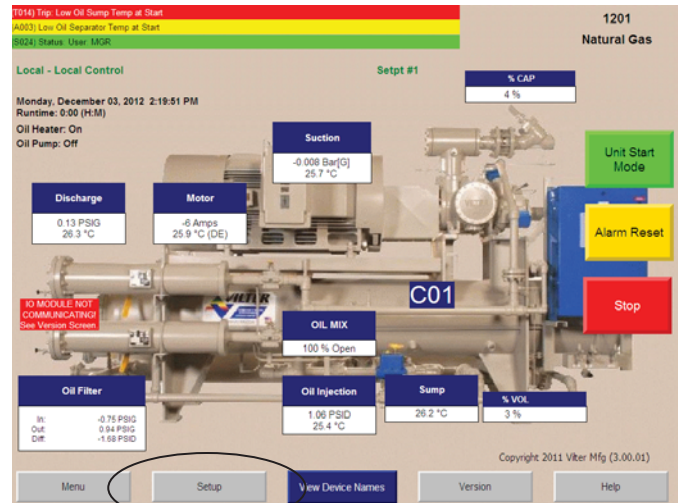

Touch Here

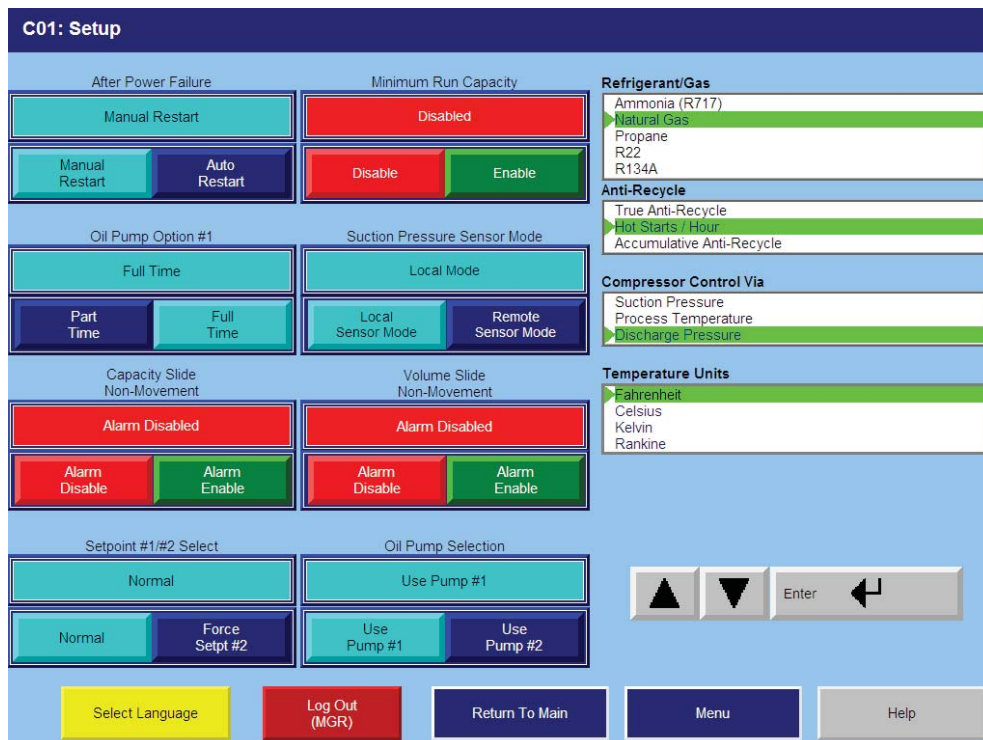


## Set Up Screen

---


- **Setpoint #1/#2 Select** – The operator can select the compressor to run with setpoint #1 or #2 settings.
- **Oil Pump Selection** – The operator can select the compressor to use either oil pump #1 or #2 when compressor has a second oil pump.
- **Pressure Units** – Select units of measure for pressure readings. Choices are PSIG, PSIA, kPa [A], kPa [G], kg/cm<sup>2</sup> [A], kg/cm<sup>2</sup> [G], Hg (vac) [G], WC [A], WC [G], Bar [A], Bar [G], Torr [A], Torr [G].
- **Temperature Units** – Select units of measure for temperature. Choices are Fahrenheit or Celsius, Kelvin and Rankine.
- **Anti-Recycle** – The operator can select from the following Anti-Recycle options: True, Accumulative, Modified, or Hot Starts. These select the strategy used to prevent excessive start/stop cycles of the compressor. Timers and counters used to enforce anti-recycling are adjusted and monitored in the Compressor Timer Settings screen, reached from the **Menu** screen. Help for the Timer Settings screen explains how the different settings and strategies operate.
- **Compressor Control Via** – Operator can choose the method or mode of compressor control. This determines which measured variable is used in making loading (capacity control) decisions. The choice selected here determines which setpoints are made available for adjustment on the Compressor Control Setpoints screen.
- **Capacity & Volume Slide Non-Movement** – Alarm enable and disable buttons permit selecting whether an alarm should be generated when failure of slides to move is detected.
- **Reset After Power Fail** – When Auto is selected, the compressor will attempt to restart on powering up if it was running in 'Auto' when powered down and enabling conditions are met. When 'Manual' is selected, the compressor powers up into the 'Stop' mode and an explicit command to run is required from an operator or comms channel.
- **Min Run Capacity** – When enabled, the Minimum Run Capacity setting on the Addition Compressor Setpoints screen operates as described in the help for that screen. When multiple compressor sequencing is used, selecting Disable here does not interfere with use of the Min Run Capacity setting in the sequencing logic.
- **Oil Pump Option #1** – The operator can choose the method the compressor oil pump operates.
- **Suction Pressure Sensor Mode** – The operator can select local or remote sensor mode. Remote sensor mode is typically used when compressors are installed in parallel.

## Vilter Only Screen



**WARNING!** Settings on this screen should be used only by Vilter representatives or persons acting under their direction. Improper setting may require service not covered under warranty.

No Economizer  
(Hard Coded)



Time

HMI Date & Time:
12/04/2012 10:13:36.145 am
10:13:36

CLX Date:
12/04/2012
CLX Time: 09:41:24

Touch to  
Synchronize HMI  
Clock to PLC

Oil Cooling  
Configuration

Is there an Oil Cooler to control? Yes

Do you want to display Oil Cooler return temp on the Main Screen? No

Is there an Oil Cooling Mixing Actuator Valve with 4-20mA control from this PLC?

Yes. This unit has the oil mixing valve.

What Kind of Oil Cooler - Step Type or VFD Type?

VFD Type Oil Cooler Running PID control Selected.

Is there a compressor motor VFD? No

Select Compressor

1051  
1201  
 1551

▲

▼

Enter

Are Motor Winding RTD's Installed? Yes

Are Motor Bearing RTD's Installed? Yes

WC/PSIG Transition Point 10000

More Options

Menu

Create Device Names

PanelView Shutdown

PanelView Configuration

Language Buttons Are Visible


Log Out (MGR)

Password

To synchronize the PanelView date and time to the Control Logix date and time:

1. Display the Vilter Only Screen (This screen has restricted access).
2. Touch the "Touch to Synchronize HMI Clock to PLC" button.

## Menu Screen

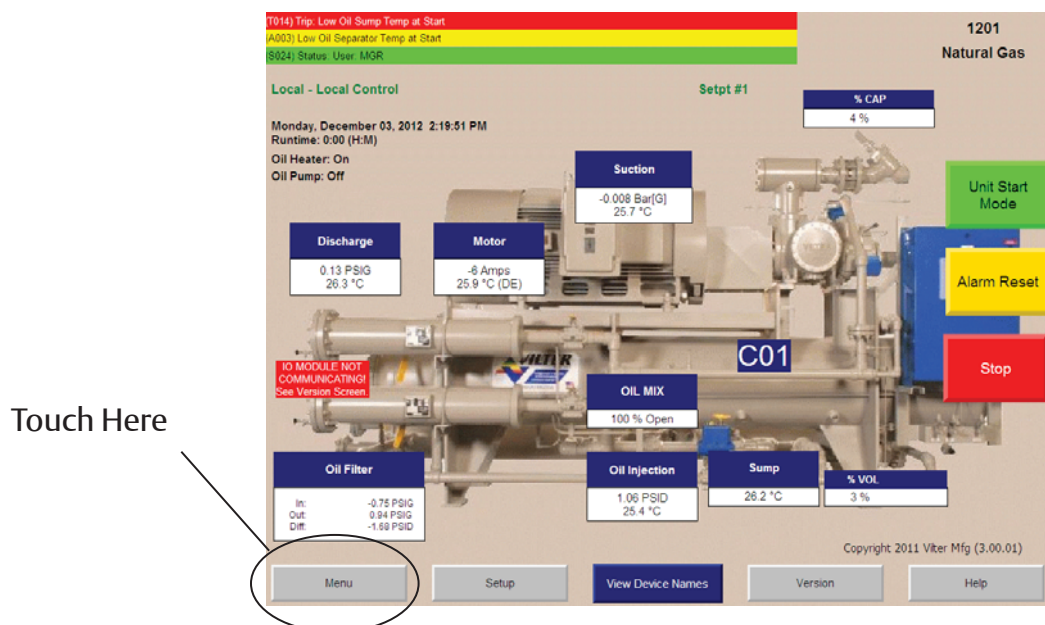

At the bottom of the **Main** screen touch the Menu button to bring up the screen shown in Figures below.

Use this screen to navigate to the other setpoint screens contained within the program. Each screen has a help button to describe the function of the screen.

There are several buttons that are common for all menu screens:

**Return to Menu** – This button always returns you to the **Menu** screen

**Log On** – The user is allowed to view data at all screen levels but cannot edit data until a login has occurred. Refer to the Log on/off Instructions on page 16.

**Set** – To change a value, the operator must first press the SET button and then the text field of the value they want to modify. A number pad will pop up for ease in entry.

**Help** – This screen will provide more information to the user about the operation of the microprocessor.

**Event List** – provides a chronological event listing.


**Chart** – Provides a line graph showing process values over a range of time.

**Auto** – Places the capacity slides into automatic mode. In automatic mode, the capacity slide moves according to control setpoint information.

**Manual** – Places the capacity slides into manual mode. In manual mode, the capacity slide moves based on input from the operator.


# Menu Screen

There are three options for the Compressor Control Setpoints:

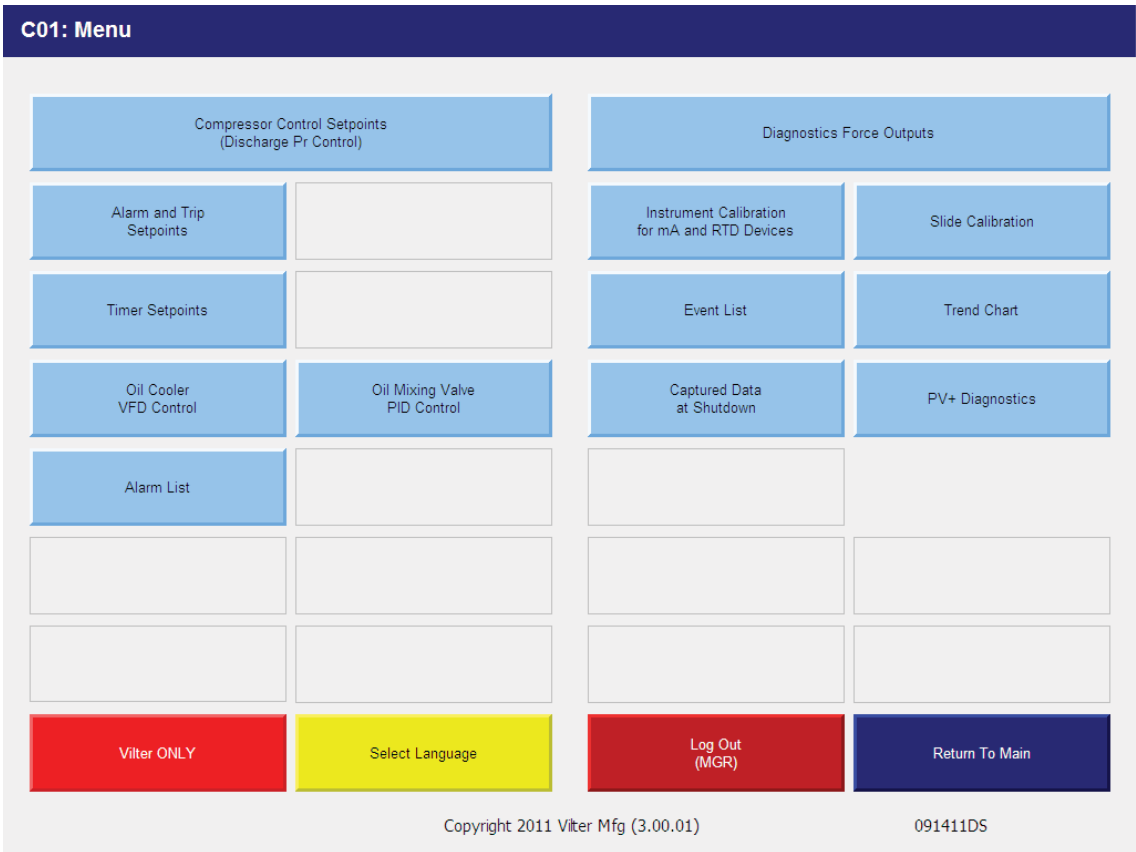


## Discharge Pressure Control

# Menu Screen

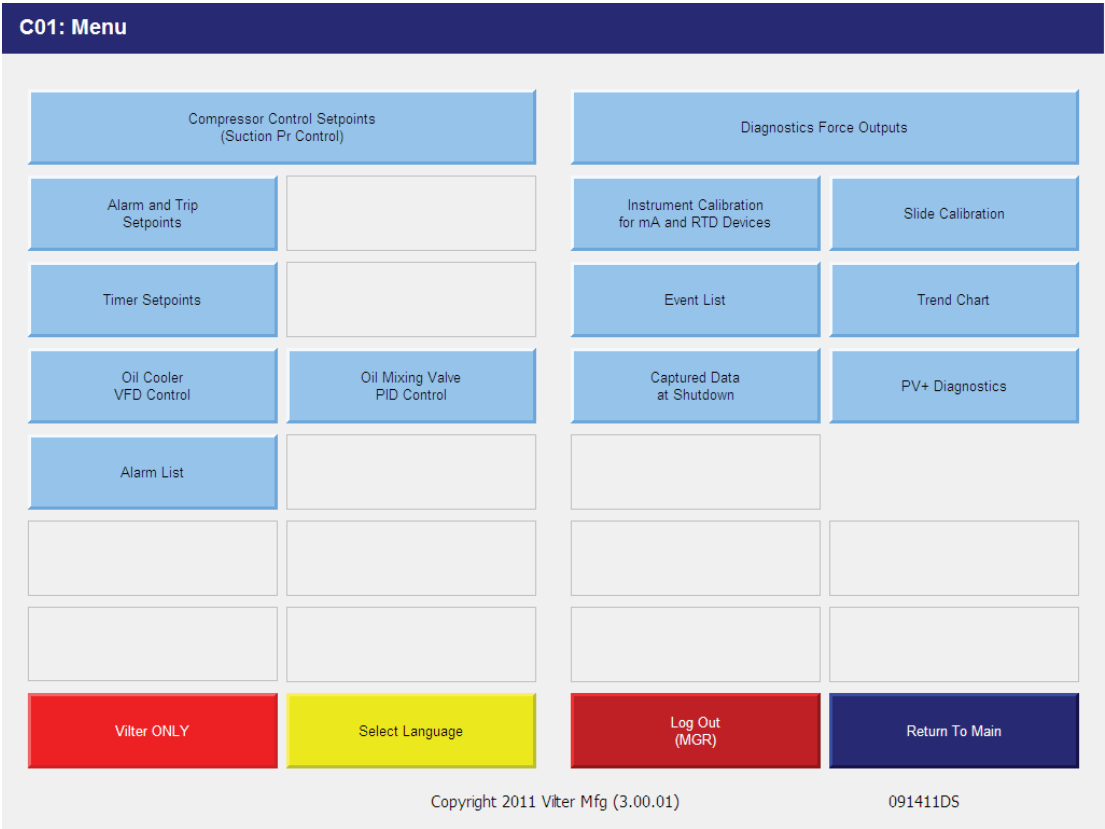

## Suction Pressure Control

# Menu Screen

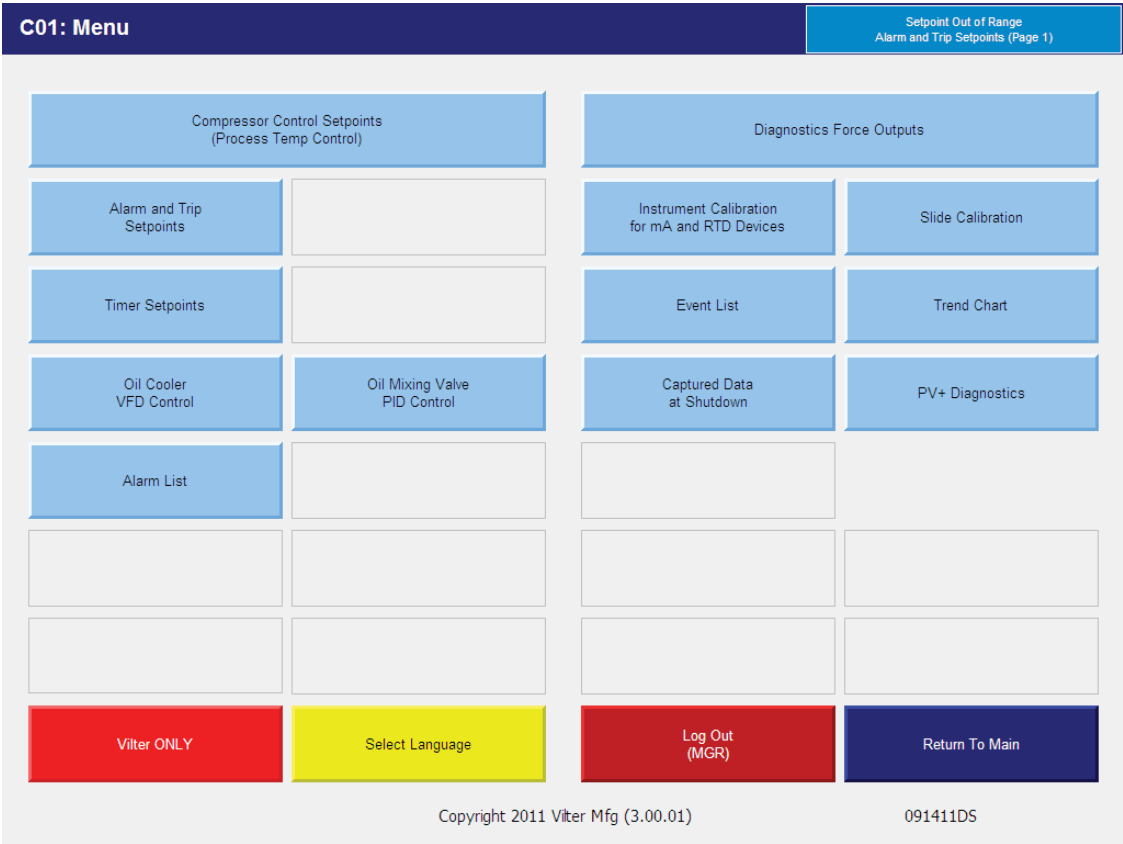

## Process Temperature Control

## Compressor Alarm and Trip

**C01: Alarm and Trip Setpoints (Page 1)**

	Alarm	Trip	Reset	
Low Suction Pressure				Next
Setpoint No. 1	-1.00 PSIG	-1.00 PSIG	-1.00 PSIG	
+/- PSIG				Back to Menu
Setpoint No. 2	-1.00 PSIG	-1.00 PSIG	-1.00 PSIG	
High Discharge Pressure				Log Out (MGR)
Setpoint No. 1	275.00 PSIG	295.00 PSIG	260.00 PSIG	
+/- PSIG				Alarm Reset
Setpoint No. 2	275.00 PSIG	295.00 PSIG	260.00 PSIG	
Low Suction Temperature	-55.0 °F	-60.0 °F	-45.0 °F	Help
High Discharge Temperature	240.0 °F	250.0 °F	240.0 °F	Display Actual Values
Low Oil Separator Start Temperature	85.0 °F	80.0 °F	90.0 °F	View Device Names
Low Oil Separator Run Temperature	90.0 °F	85.0 °F	100.0 °F	
Low Oil Injection Temperature	80.0 °F	70.0 °F	90.0 °F	
High Oil Injection Temperature	210.0 °F	220.0 °F	200.0 °F	Select Language

- **Low Suction Pressure Setpoints 1&2** – This is the low suction pressure safety. This safety is active in both temperature and pressure control modes. An alarm or trip will be active on a drop in suction pressure below the setpoint value.
- **High Discharge Pressure Setpoints 1&2** This is the high discharge pressure safety. The alarm or trip will be active on a rise in discharge pressure above the setpoint value.
- **Low Suction Temperature** – This is the lowest allowable Suction temperature. The compressor will not be allowed to run if the Suction Temperature is below the trip setting.
- **High Discharge Temperature** – This is the high discharge temperature safety. The alarm or trip will be active if the discharge temperature should rise above the setpoint value.
- **Low Oil Separator Start Temperature** – This is the starting low oil separator temperature safety. The compressor is prevented from starting or running if the oil in the separator is below the trip value. After a time delay (Oil Separator Temperature Safety Changeover), this safety is deactivated and the Lo Oil Separator Run Temperature is the active setpoint.
- **Low Oil Separator Run Temperature** – This is the running low oil separator temperature safety. After a time delay (Oil Separator Temperature Safety Changeover), the Lo Oil Separator Start Temperature is bypassed and Lo Oil Separator Run Temperature is the active setpoint. The alarm or trip will be active if the oil temperature of the separator drops below the setpoint value.
- **Low Oil Injection Temperature** – This is the low oil injection safety. The alarm or trip will be active if oil injection temperature drops below setpoint value after a time delay (Oil Injection Temperature Safety Changeover).
- **High Oil Injection Temperature** – This is the high oil injection temperature safety. The alarm or trip will be active on a rise in oil injection temperature above the setpoint value.
- **Low Control Temperature** – This is the low process temperature safety. The alarm or trip will be active on a drop in control temperature below the setpoint (only in process temperature mode).
- **High Control Temperature** – This is the high process temperature safety. The alarm or trip will be active on a rise in control temperature above the setpoint (only in process temperature mode).



## Compressor Setpoints and Alarms

**C01: Alarm and Trip Setpoints (page 2)**

	Alarm	Trip	Reset	
Prelube Oil Pressure		6.000 PSID	8.000 PSID	Back
Low Oil Pressure	38.000 PSID	35.000 PSID	40.000 PSID	Back to Menu
High Filter Diff. Press. -Start	50.000 PSID	50.000 PSID	45.000 PSID	Log Out (MGR)
High Filter Diff. Press. -Run	15.000 PSID	18.000 PSID	10.000 PSID	Alarm Reset
High Motor Amps	112 Amps	122 Amps	130 Amps	Help
Motor Winding Temperature	302.0 °F	338.0 °F	300.0 °F	Display Actual Values
Motor Bearing Temperature	212.0 °F	221.0 °F	200.0 °F	View Device Names
				Select Language
Note: All pressure setpoints on this page are differential pressures.				Pr Differential Definitions   Pr Differential Conversion

- **Prelube Oil Pressure** – This is the low Prelube Oil Pressure safety. The Trip will be active if the compressor is in Pre-lube and the Oil Pressure drops below the set-point value.
- **Low Oil Pressure** – This is the Low Oil Pressure Safety. The Alarm and Trip will occur if the Oil Pressure drops below the set-point(s) value.
- **High Filter Differential Pressure – Start** – This is the High Filter Differential Pressure (at compressor Start) Safety. The Alarm and Trip will occur if the Oil Differential Pressure (Filter Inlet Pressure – Manifold Pressure) at Compressor Start is above the set-point(s).
- **High Filter Differential Pressure – Run** – This is the High Filter Differential Pressure (while the compressor is running) Safety. The Alarm and Trip will occur if the Oil Differential Pressure (Filter Inlet Pressure – Manifold Pressure) while the Compressor is running above the set-point(s).
- **High Motor Amps** – This is the High Motor Amps Safety. The Alarm and Trip will occur if the Motor Amps exceed the set-point(s).
- **Motor Winding Temperature** - This is the High Winding Temperature Safety. The Alarm and Trip will occur if the Motor Winding Temperature is above the set-point(s). These set-points are only active when the compressor has been selected to have Motor Winding Temperature RTDs.
- **Motor Bearing Temperature** - This is the High Bearing Temperature Safety. The Alarm and Trip will occur if the Motor Bearing Temperature is above the set-point(s). These set-points are only active when the compressor has been selected to have Motor Winding Temperature RTDs.

## Compressor Timer Setpoints

C01: Compressor Timer Setpoints		
	Current	Value
Capacity Decrease at Start	0 sec	30 sec
Comp. Starter Aux. Contact Bypass	0 sec	30 sec
Volume Slide Adjustment Timer	0 sec	20 sec
Minimum Compressor Prelube Time	0 sec	5 sec
Oil Pressure Bypass at Compressor Start	0 sec	60 sec
Prelube Oil Pump Time Limit	0 sec	60 sec
Filter Diff. Pressure Safety Changeover	0 sec	60 sec
Low Oil Separator Level Bypass Timer	0 sec	60 sec
After Power Failure	0 min	5 min
Oil SeparatorTemp.Safety Changeover	0 min	10 min
Low Oil Injection Temp. Bypass	0 min	10 min
Number of Hot Starts per Hour	0	2
True Anti-Recycle Timer	0 min	20 min
Accumulative Anti-Recycle Timer	0 min	20 min

Back to Menu  
Log Out (MGR)  
Help

To change a timer setting, a user with high access level must be logged on.

- **Capacity Decrease At Start** – At compressor startup, the capacity motor is held at minimum position for this time period. After the timer expires, the slide is free to move in accordance to the system demands.
- **Compressor Starter Auxiliary Contact Bypass** – This timer is used to bypass the motor amperage input at start. After the timer times out, the program determines if the motor starter has pulled in by testing the amperage channel. If the program determines that the starter did not “pull in”, then the compressor will fail on “Motor Starter Fail” message.
- **Volume Slide Adjustment Timer** – This timer determines the intervals the volume slide is adjusted. If the volume slide is between 2½% & 7% away from the desired volume ratio, the motor is pulsed once toward the desired volume.

If the volume slide is more than 7% away from the desired value, the volume slide motor is continuously energized until the valve is within 2½% of the desired value. If the actual position is within 2½% of the desired value, no adjustment will be made.

- **Minimum Compressor Prelube Timer** – This is the length of time the oil pump will run after establishing the Prelube Oil Pressure, to prime oil circuit before starting the compressor.
- **Oil Pressure Bypass At Compressor Start** – This timer bypasses the Low Oil Pressure limits. The timer starts when the compressor starts. After the timer has cycled, the Low Oil Pressure setpoint is active.
- **Prelube Oil Pump Time Limit** – This timer puts a limit on how long the prelube oil pump is allowed to run without establishing the Prelube Oil Pressure.

## Compressor Timer Setpoints

---

- **Filter Differential Pressure Safety Changeover** – This timer bypasses the Hi Run Filter Differential Pressure setting during start, to allow the Hi Start Filter Differential Pressure to protect against High Filter Differential during start. After the timer has cycled, the Hi Run Differential Pressure Safety is active.
- **Low Oil Separator Level Bypass Timer** – This timer bypasses the low oil level switch for momentary drops in the oil level. If the switch is still open after the Low Oil Separator Level Bypass Timer has timed out, the compressor will be shut down and an alarm will be displayed. This timer is available if the unit is equipped with a low oil separator float switch. The oil level switch is standard on all liquid injection units and optional on all others.
- **Auto Restart After Power Failure** – This timer forces the microprocessor to wait for the set time period after a power failure before starting the compressor unit. By staggering the time settings, the compressors can be allowed to start automatically, one at a time, after a power failure. This prevents excessive loads on the power system that could be caused by all of the equipment coming online at the same time. The Power-Up Auto Start operator option must be selected on the **Setup** screen for this option to be active.
- **Oil Separator Temperature Safety Changeover** – This timer allows Low Oil Separator Start Temperature Safety setpoint to protect the compressor against cold oil during starting. After the timer has cycled, the Low Oil Separator Run Temperature is then active.
- **Low Oil Injection Temperature Bypass** – This timer bypasses the Low Oil Injection Temperature Safety Setpoint during start-up. After the timer cycles, the Low Oil Injection Temperature Safety is set.
- **Hot Starts / Hr Counter** – This counter counts compressor starts. After every start, a one-hour timer is reset and starts timing. If the timer times out, the hot starts counter is reset. When the counter reaches its preset value, it will not allow another compressor start until the one-hour timer times out and resets the counter. In other words, the hot starts counter will be reset when the time between compressor starts total one hour. This counter allows repetitive compressor starts, but once the counter has reached its set point, it requires a one-hour window between compressor starts in order for the counter to be reset. **Note: if this option is chosen an arrow will appear alongside its current value. When active a point will appear.**
- **True Anti-Recycle Timer** – Once the compressor turns off, the timer will keep the compressor off for the setting of True Anti-Recycle Timer. This timer is used to prevent short cycling of the compressor. **Note: if this option is chosen an arrow will appear alongside its current value. When active a point will appear.**
- **Accumulative Anti-Recycle Timer** – This timer also forces a specified time between compressor starts. When the compressor starts, the timer resets then starts timing and accumulates running time. Once the compressor shuts down, it will not be allowed to restart for the remainder of the time left on the Accumulative Anti-Recycle Timer. Unlike the True Anti-Recycle Timer, if the compressor has run for a time period that exceeds the setpoint of the Accumulative Anti-Recycle Timer, then when the compressor shuts down, it will be allowed to restart immediately. The compressor restart options (Hot Starts or Anti-Recycle Timers) are selected from the **Setup** screen. One additional Anti-Recycle Timer that can be selected from the **Setup** screen is the Modified Anti-Recycle Timer. **Note: if this option is chosen an arrow will appear alongside its current value. When active a point will appear.**

# Compressor Control Setpoints

From the **Menu** screen, press the Compressor Control setpoints button. The compressor control setpoints screen will be shown.

These screens enable the operator to view and adjust settings that affect compressor control.

From the **Setup** screen, the operator can choose the method or mode of compressor control:

## Compressor Control Via:

1. Discharge Pressure
2. Suction Pressure
3. Process Temperature Control

Once the method is chosen, the appropriate setpoints are then displayed on the Compressor Control Setpoints screen.

The compressor will decide when to increase or decrease capacity by comparing the controlled variable to the setpoints. The maximum on time and minimum off time settings for slide actuator motors can be used to reduce hunting or improve response time. The default settings of 3 and 20 seconds respectively, provide good operation over a wide range of conditions.

**C01: Compressor Control Setpoints (Page 1)**

Suction Pressure Control      Actual: -0.12 PSIG

Pressure Control On/Off      Auto Start      Auto Stop

Setpoint No. 1      5.30 PSIG      0.30 PSIG

Setpoint No. 2      0.00 PSIG      0.00 PSIG

Pressure Control Increase      Control Value

Setpoint No. 1      255.00 PSIG

Setpoint No. 2      0.00 PSIG

Pressure Control Decrease      Control Value

Setpoint No. 1      265.00 PSIG

Setpoint No. 2      0.00 PSIG

+/- PSIG

Capacity Motor Control      On      Off

Capacity Increase      3 sec      10 sec

Capacity Decrease      3 sec      10 sec

Volume      Auto      Manual

Next

Back to Menu

Log Out (MGR)

Help

View Device Names

Select Language

## Level 1 Access – Compressor Control Setpoints

From the **Menu** screen, press the Compressor Control setpoints button. The compressor control setpoints screen will be shown.

# Compressor Control Setpoints

## Discharge Pressure Control

**C01: Compressor Control Setpoints (Page 1)**

Discharge Pressure Control

Actual: 0.134 PSIG

Next

Pressure Control On/Off

Auto Start

Auto Stop

Setpoint No. 1	0.00 PSIG	310.00 PSIG
Setpoint No. 2	0.00 PSIG	310.00 PSIG

Pressure Control Increase

Control Value

Setpoint No. 1	234.00 PSIG
Setpoint No. 2	234.00 PSIG

Pressure Control Decrease

Control Value

Setpoint No. 1	238.00 PSIG
Setpoint No. 2	240.00 PSIG

+/- PSIG

Capacity Motor Control

On

Off

Volume

Capacity Increase	3 sec	10 sec
Capacity Decrease	3 sec	10 sec

Auto

Manual

Back to Menu

Log Out (MGR)

Help

View Device Names

Select Language

### Setpoints on this screen:

- **Discharge Pressure On/Off** – The compressor will automatically cycle ON and OFF at the setpoints entered. Discharge Pressure On/Off control is only active if the Compressor Control Via Discharge Pressure option is selected on the **Setup** screen. If a compressor shutdown is desired on a discharge pressure drop and a manual reset is required, set the OFF value below the Low Discharge Pressure Safety Trip value. This will shut down the unit and a reset will be required to restart it.
- **Discharge Pressure Capacity Increase** – The capacity of the compressor will increase when suction pressure is at or above the Increase ON setpoint, and the increase “off” timer has cycled. Capacity will continue to increase until the Discharge Pressure Capacity Increase OFF setpoint is reached. If closer system control is desired, set the ON and OFF setpoints at the same values. This will essentially eliminate any differential between the ON and OFF setpoints.
- **Discharge Pressure Capacity Decrease** – The capacity of the compressor will decrease when discharge pressure is at or below the ON setpoint, and the decrease “off” timer has cycled. Capacity will continue to decrease until the Discharge Pressure Capacity Decrease OFF setpoint is reached. If closer system control is desired, set the ON and OFF setpoints at the same values. This will essentially eliminate any differential between the ON and OFF setpoints. While this setting is only available for adjustment on the Control Setpoints screen when the Compressor Control Via Suction Discharge option is selected on the **Setup** screen, it has an override effect when control is via process temperature as described below.

# Compressor Control Setpoints

## Suction Pressure Control

**C01: Compressor Control Setpoints (Page 1)**

Suction Pressure Control      Actual: -0.12 PSIG

Pressure Control On/Off      Auto Start      Auto Stop

Setpoint No. 1	5.30 PSIG	0.30 PSIG
Setpoint No. 2	0.00 PSIG	0.00 PSIG

Pressure Control Increase      Control Value

Setpoint No. 1	255.00 PSIG
Setpoint No. 2	0.00 PSIG

Pressure Control Decrease      Control Value

Setpoint No. 1	265.00 PSIG
Setpoint No. 2	0.00 PSIG

+/- PSIG

Capacity Motor Control      On      Off

Capacity Increase	3 sec	10 sec
Capacity Decrease	3 sec	10 sec

Volume

Auto

Manual

Next

Back to Menu

Log Out (MGR)

Help

View Device Names

Select Language

### Setpoints on this screen:

- **Suction Pressure On/Off** – The compressor will automatically cycle ON and OFF at the setpoints entered. Suction Pressure On/Off control is only active if the Compressor Control Via Suction Pressure option is selected on the **Setup** screen. If a compressor shutdown is desired on a suction pressure drop and a manual reset is required, set the OFF value below the Low Suction Pressure Safety Trip value. This will shut down the unit and a reset will be required to restart it.
- **Suction Pressure Capacity Increase** – The capacity of the compressor will increase when suction pressure is at or above the Increase ON setpoint, and the increase “off” timer has cycled. Capacity will continue to increase until the Suction Pressure Capacity Increase OFF setpoint is reached. If closer system control is desired, set the ON and OFF setpoints at the same values. This will essentially eliminate any differential between the ON and OFF setpoints.
- **Suction Pressure Capacity Decrease** – The capacity of the compressor will decrease when suction pressure is at or below the ON setpoint, and the decrease “off” timer has cycled. Capacity will continue to decrease until the Suction Pressure Capacity Decrease OFF setpoint is reached. If closer system control is desired, set the ON and OFF setpoints at the same values. This will essentially eliminate any differential between the ON and OFF setpoints. While this setting is only available for adjustment on the Control Setpoints screen when the Compressor Control Via Suction Pressure option is selected on the **Setup** screen, it has an override effect when control is via process temperature as described below.

# Compressor Control Setpoints

## Process Temperature Control

C01: Compressor Control Setpoints (Page 1)

Setpoint Out of Range  
Alarm and Trip Setpoints (Page 1)

Temperature Control On/Off

	<u>Auto Start</u>	<u>Auto Stop</u>
Setpoint No. 1	34.1 °F	40.2 °F
Setpoint No. 2	43.3 °F	46.4 °F

Actual: 71.1 °F

Next

Back to Menu

Log Out (MGR)

Temperature Control Increase

	<u>Control Value</u>
Setpoint No. 1	43.3 °F
Setpoint No. 2	104.4 °F

Control Value

Help

View Device Names

Temperature Control Decrease

	<u>Control Value</u>
Setpoint No. 1	115.6 °F
Setpoint No. 2	121.1 °F

Control Value

Help

View Device Names

Suction Pressure Override

	<u>On</u>	<u>Off</u>
Setpoint No. 1	265.00 PSIG	135.30 PSIG
Setpoint No. 2	0.00 PSIG	225.30 PSIG

+/- PSIG

Actual: -0.12 PSIG

Select Language

Capacity Motor Control

	<u>On</u>	<u>Off</u>
Capacity Increase	3 sec	10 sec
Capacity Decrease	3 sec	10 sec

Volume

Auto

Manual

### Setpoints on this screen:

- **Process Temperature Control** – Provides for a Suction Pressure Override feature. If the suction pressure should drop below the Suction Pressure Capacity Decrease OFF setpoint, the Suction Pressure Capacity Decrease OFF setpoint will override the Capacity Control F Increase and prevent the compressor capacity from increasing (loading). If the suction pressure should continue to decrease below the Suction Pressure Capacity Decrease ON setpoint, the compressor capacity will be forced to decrease until the suction pressure is just above the Suction Pressure Capacity Decrease ON setpoint. This will help stabilize the suction pressure, allowing for the process temperature to be gradually pulled down. The Suction Pressure Capacity Decrease ON and OFF setpoints can viewed or adjusted by temporarily selecting “Processor Control Via Suction Pressure” on the Setup screen.

### Note: Capacity Control for Refrigeration Only.

- **Capacity Control °F On/Off** – The compressor will automatically cycle ON and OFF at the setpoints entered. Capacity Control °F On/Off is only active if the Compressor Control Via Process Temperature option is selected on the Setup screen. If compressor shutdown is desired on a process temperature drop and a manual reset is required, set the OFF value below the Low Control Temperature Safety trip valve. This will shut down the unit and a reset will be required to restart.



## Compressor Control Setpoints

---

- **Capacity Control °F Increase** – The capacity of the compressor will increase when process temperature is at or above the ON setpoint, and the increase “off” timer has cycled. Capacity will continue to increase until the Capacity Control °F Increase OFF setpoint is reached. If closer system control is desired, set the ON and OFF setpoints at the same values. This will essentially eliminate any difference between the ON and OFF setpoints. Process temperature control of the capacity is active only if the Compressor Control Via Process Temperature option is selected on the **Setup** screen.
- **Capacity Control °F Decrease** – The capacity of the compressor will decrease when process temperature is at or below the ON setpoint, and the decrease “off” timer has cycled. Capacity will continue to decrease until the Capacity Control °F Decrease OFF setpoint is reached. If closer system control is desired, set the ON and OFF setpoints at the same values. This will essentially eliminate any difference between the ON and OFF setpoints. Process temperature control of the capacity is active only if the Compressor Control Via Process Temperature option is selected on the **Setup** screen.



## Additional Compressor Controls

**C01: Compressor Control Setpoints (Page 2)**

Parameter	Setpoint No. 1	Setpoint No. 2	On	Off
High Discharge Pressure Unload	250.00 PSIG	275.00 PSIG	105.0 °F	110.0 °F
Motor Amps Load Limit	98 Amps	104 Amps	2.8 PR	3.0 PR
Oil Separator Heater Temp	105.0 °F	110.0 °F	0.0 %	100.0 %
Oil Pump Restart	2.8 PR	3.0 PR	10.0 %	15.0 %
Volume Slide Adj Factor	0.0 %	100.0 %		
Capacity Slide Adj Range	0.0 %	100.0 %		
Minimum Run Capacity	10.0 %	15.0 %		
Current Transformer Ratio	125.0 CR			

Buttons: Back, Back to Menu, Log Out (MGR), Help, View Device Names, Select Language, Display Actual Values, Forced Unload (Capacity Decrease 0.0 %/sec, VFD Transition Point to Capacity Decrease 0.0 %/sec).

- **High Discharge Pressure Unloading Setpoints** – Active in Suction Pressure or Process Temperature Capacity Control mode. These setpoints limit the compressor from loading at high discharge pressure conditions. They override the Suction Pressure or Process Temperature Capacity Control setpoints. The capacity of the compressor will decrease when the discharge pressure is at or above the ON set point. When the OFF setpoint is reached, the compressor will stop from unloading any further.

- **Motor Amp. Load Limit Setpoints** – This control limit is the motor full load current draw and the maximum current draw. This control limit will only prevent the compressor from loading and does not shut down the compressor if the maximum current draw setpoint is exceeded. The actual values entered may depend on particular circumstances. The function of the setpoint is as follows:

If the motor is operating at the full load amperage (FLA) setting, the compressor is prevented from loading. If the motor amps exceed the MAX setpoint, the compressor is forced to unload until the current is at 1.0625 times above the FLA setting. If the motor being used has a service factor below 1.0625, use a value for the FLA that is 10% lower than the MAX value.

- **Oil Separator Heater Temperature** – This control limit determines when the oil separator heater is energized. A decrease in oil separator

temperature below the ONsetpoint energizes the oil separator heater. On an increase in oil separator temperature above the OFF setpoint, the oil heater is de-energized.

- **Oil Pump Restart** – To determine the ON and OFF values for the pressure ratios, take the absolute discharge pressure (PSIA), and divide it by the absolute suction pressure (PSIA). If the pressure ratio is below the ON setpoint value, the oil pump will restart and stay on until the pressure ratio increases above the OFF setpoint. This enables a high stage compressor with a part time oil pump to temporarily operate under conditions requiring a full time oil pump.

**EXAMPLE:** To calculate the OFF value, if the absolute discharge pressure is 200 PSIA and the desired absolute suction pressure of the cut-out point is 67 PSIA, the discharge pressure is divided by the suction pressure. The result is a OFF value of approximately 3.0. This would then be entered for the OFF pressure. Now determine the ON value, take the absolute discharge pressure (200 PSIA) and divide this by the desired absolute suction pressure (71 PSIA). This results in a ON valve of 2.8.

- **Capacity Slide Adjustment Range** – This control limit determines the capacity range the Capacity Slide Adjustment factor will be active. The factor will be active from 0% capacity and will be deactivated when the OFF setpoint is reached. On a decrease in capacity below the ON set point, the factor will be active.


## Additional Compressor Controls

---

- **Minimum Run Capacity** – The Minimum Run Capacity is the minimum capacity the compressor will be allowed to run at. When the compressor is started, it will be loaded to the Minimum Run Capacity control setpoint minus 5%. This is done to prevent the capacity control from hunting if the load is not great enough to keep the compressor capacity at the Minimum Run Capacity setpoint. On a call for unloading, the compressor will unload until it reaches the Minimum Run Capacity control setpoint. It will remain there until the suction pressure reduces and the compressor cycles off on the Suction Pressure On/Off control setpoint.
- **Volume Slide Adjustment Factor** – This value is normally zero (0) and will not require changing. However, if the system operating conditions show the volume ratio is not at the optimum value for the system, this value can be adjusted up or down to permit the most efficient positioning of the volume slide valves. To determine the value to enter, first ensure that the system is in a steady operating state and place the volume side in manual. **NOTE:** The volume position setting and increase the volume side position slowly until the lowest amperage level is achieved. If the amperage level rises instead of falls, decrease the volume slide position until the lowest amperage is achieved.  
Record the differential from the original position. This will then be adjustment factor to enter for our system. **NOTE:** Negative numbers can be used for this setting. This setpoint is active on a drop in capacity below the Capacity Slide Adjustment Range cut-in (ON) setting. The adjustment is disabled when capacity rises above the Adjustment Range OFF setting. Normally, the “ON-Off” set points should both be set at 100%, so the volume side adjustment factor will be applied over the full range of 0 to 100%
- **Current Transformer Ratio** – The value entered must agree with the Current Transformer Ratio on the current transformer being used. The current transformer is mounted in the compressor motor conduit box. The ratio is stated as the ratio of measured current to a nominal full scale current in the secondary of 5 amps; only the first of these is entered. For example, if the ratio reads 250/5, enter 250.
- **Low Suction Pressure Load Limit** – Active in Discharge Pressure Capacity Control mode only. These setpoints limit the compressor from loading at low suction pressure conditions. They override the discharge pressure capacity control setpoints. When the OFF setpoint is reached (at or below setpoint), the compressor will not be allowed to load any further. If the suction pressure continues to fall, the capacity of the compressor will decrease when the suction pressure is at or below the ON set point. It will stop decreasing when the suction pressure rises to a point that is just below the ON set point.
- **Forced Unload – Capacity Decrease (%/sec)** – This is the rate at which the Main Motor VFD will drop when there is a Forced Unload condition present in the Compressor.
- **Forced Unload – VFD Transition Point to Capacity Decrease (%/sec)** – This is VFD speed at which the physical capacity slide will begin to decrease while there is a Forced Unload condition present in the Compressor.



## Motor Speed Setpoints & Control Screen

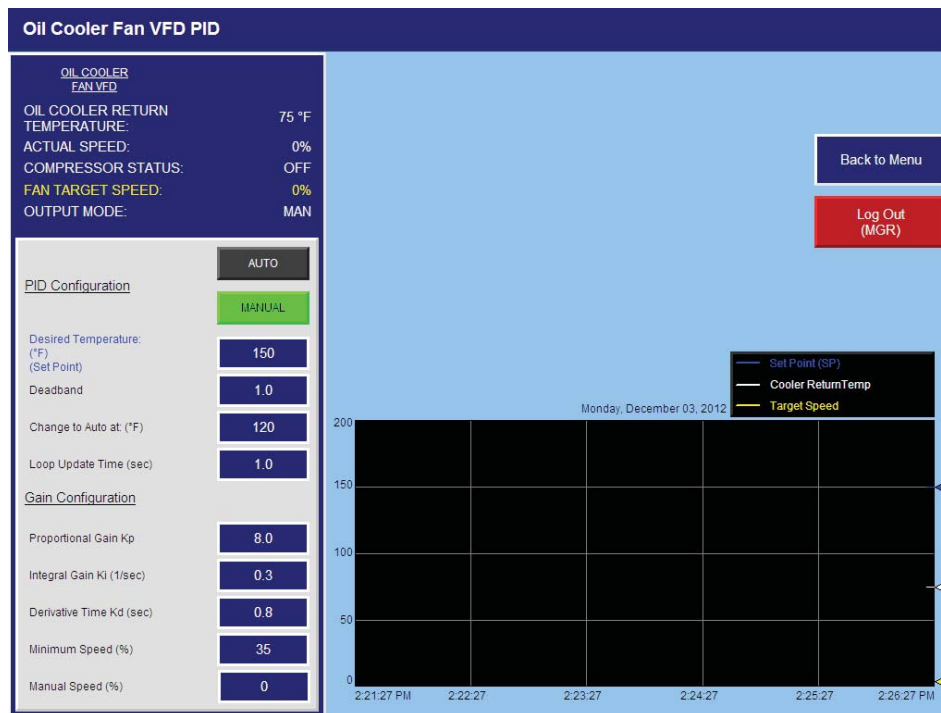

### VFD SCREEN SETTINGS

#### Settings:

##### **Auto Button:**

Choosing Auto will do the following:

1. While the fan is off the *Output Mode* will be forced to *Manual Mode*.
2. When the fan starts, it will remain in *Manual Mode* at the *Initial Speed* for the period defined as *Delay Auto*.
3. After the *Delay Auto* time expires, the *Output Mode* will change to *Auto Mode*.
4. In *Auto Mode*, the VFD is enabled to increase and decrease speed to maintain the temperature settings.
5. *Increase At*: High setting where an increase of speed is desired.
6. *Decrease At*: Low setting where a decrease of speed is desired
7. *Initial Speed*: Desired forced speed to start the fan at as described above. Note: The PLC will automatically keep this value to at least the *Minimum Speed* setting.

## Motor Speed Setpoints & Control Screen

---

8. *Max Speed Detect*: Setting for PLC program detection of maximum speed. This setting will not limit the speed of the VFD. Generally, this setting is useful only when sequencing of multiple devices is used.
9. *Minimum Speed*: This is the minimum speed that the PLC will send to the VFD. This is active in Manual Mode and in Auto Mode.

*Adjustment Limit*: This is the maximum amount of change in speed per adjustment. If the *Calculated Adjustment* is greater than the *Adjustment Limit* value, the PLC output will only change the amount of the *Adjustment Limit*. If the *Calculated Adjustment* is less than the *Adjustment Limit* value, the PLC output will change the amount of the *Calculated Adjustment*. The *Adjustment Limit* is used in conjunction with the *Gain* to prevent target overshooting.

10. *Gain*: This value is factory set to 2.50 but may be set from 0.1 to 99. For VFDs, *Gain* is a multiplication factor used in a calculation to determine an adjustment to the speed each set interval. This interval is defined as the *Increase Rate or Decrease Rate*. Factory settings for *Increase Rate and Decrease Rate* are 2 to 5 seconds.

### **Manual Button:**

Choosing Manual will do the following:

1. The fan *Output Mode* will remain *Manual Mode*.
2. *Manual Speed*: This setting becomes accessible only when the Manual Button is chosen. Enter the desired speed (%) for the VFD.

## Diagnostics Force Output

**C01: Diagnostics Force Outputs ON/OFF**

	OUTPUT	
Main Compressor Motor Starter *	OFF	INPUT OFF
Oil Pump #1 Starter	OFF	
Remote Alarm	OFF	
Remote Trip	OFF	
Oil Separator Heater	ON	
Comp. Starter & VFD Reset **	OFF	
Gas Equalizing Solenoid	OFF	
Oil Cooler Fan	OFF	Forced Speed 100 %

Notes:  
\* Comp. Motor Starter: 3 second limit, momentary button.  
\*\* Comp. Starter & VFD Reset usable only if applicable.

Back to Menu  
Log Out (MGR)  
Help  
View Device Names

**WARNING: Be sure to remove all outputs from Forced-On mode before exiting this screen!**

To force an output, a user with high level access must be logged on first. Without sufficient access, the outputs display without force buttons. Touch the Logon button or Set button to prompt the Logon screen. At the Logon screen, enter the user name (case sensitive) then the user's password (case sensitive) then press the <-| enter button. The currently logged in user's name displays on the Logon screen, on the Logon button (on the main menu and on the Setup screen).

Once a user with sufficient access is logged on, force buttons appear.

To force an output on, touch its button. The "Main Compressor Motor Starter\*" button and "Starter Reset" button are momentary-on buttons while the others are maintained buttons. Forced-on buttons display green. On/Off output status displays to the right of each button.

Return all maintained buttons to their off (grey color) state before exiting this screen. Exiting this screen does not automatically remove forces.

# Instrument Calibration

To calibrate, a user with high level access must be logged on first. Without sufficient access, the raw input values and calibrated values display without “Calibrate” buttons. Touch the Logon button or Set button to prompt the Logon screen. At the Logon screen, enter the user name (case sensitive) then the user’s password (case sensitive) then press the <-| enter button. The currently logged in user’s name displays on the Logon screen, on the Logon button (on the main menu and on the Setup screen).

Once a user with sufficient access is logged on, Calibrate buttons appear.

The following items can be calibrated from this screen: Suction Pressure Transducer, Discharge Pressure Transducer, Oil Manifold Pressure Transducer, Oil Filter Inlet Pressure Transducer, Motor Amperage, Oil Cooling Fan Feedback, Suction Temperature RTD, Discharge Temperature RTD, Oil Separator Temperature RTD, Oil Injection RTD.

The “Calibrated Values” reflect the values used for control of the system. The user can perform calibration by pressing the respective Calibrate button alongside the value prompting the Calibration screen.

Calibration Instructions are provided on each Instrument Calibration screen.

**C01: Instrument Calibration (1 of 2)**

	<b>mA Reading</b>	<b>Calibrated Value</b>	
Suction Pressure Transducer	5.139 mA	-0.12 PSIG	
Discharge Pressure Transducer	4.530 mA	0.13 PSIG	Calibrate Pressures
Oil Manifold Pressure Transducer	4.565 mA	0.94 PSIG	
Oil Filter Inlet Pressure Transducer	4.513 mA	-0.75 PSIG	
Motor Amperage	03.200 mA	-6.3 Amps	Calibrate

Calibrate Temps

	<b>Raw T Reading</b>	<b>Calibrated Value</b>
Suction Temperature	78.2 °F	78.2 °F
Discharge Temperature	79.4 °F	79.4 °F
Oil Separator Temperature	79.1 °F	79.1 °F
Oil Injection Temperature	77.7 °F	77.7 °F

Oil Filter Differential Pressure

Calibrate

Oil Injection Pressure

Calibrate

NEXT

Back to Menu

Log Out (MGR)

Help

Select Language

View Device Names

# Instrument Calibration

**C01: Instrument Calibration (1 of 2)**

	<b>mA Reading</b>	<b>Calibrated Value</b>		
Suction Pressure Transducer	5.139 mA	-0.12 PSIG		NEXT
Discharge Pressure Transducer	4.530 mA	0.13 PSIG	Calibrate Pressures	Back to Menu
Oil Manifold Pressure Transducer	4.565 mA	0.94 PSIG		Log Out (MGR)
Oil Filter Inlet Pressure Transducer	4.513 mA	-0.75 PSIG		
Motor Amperage	03.200 mA	-6.3 Amps	Calibrate	Help
				Select Language
	<b>mA Reading</b>	<b>Calibrated Value</b>	Calibrate 4-20mA Temp Transmitters	View Device Names
Suction Temperature	78.200 mA	78.2 °F		
Discharge Temperature	79.400 mA	79.4 °F		
Oil Separator Temperature	79.100 mA	79.1 °F	Oil Filter Differential Pressure	Calibrate
Oil Injection Temperature	77.700 mA	77.7 °F	Oil Injection Pressure	Calibrate

**C01: Instrument Calibration (2)**

	<b>Raw Data</b>	<b>Calibrated Value</b>		
Winding Phase A	0.4 °F	0.4 °F		Calibration Menu
Winding Phase B	0.4 °F	0.4 °F	Calibrate RTD's	Main Menu
Winding Phase C	0.4 °F	0.4 °F		Log Out (MGR)
Bearing (Drive End)	0.4 °F	0.4 °F		
Bearing (Opposite Drive End)	0.4 °F	0.4 °F		Help
	<b>mA Reading</b>	<b>Calibrated Value</b>		Select Language
Methane Gas Detector	00.004 mA	-25.0 %LEL	Calibrate	
Motor Vibration Sensor	00.004 mA	-0.25 in/sec		
Compressor Vibration Sensor	00.004 mA	-0.25 in/sec		



# Instrument Calibration Pressures

C01: Instrument Calibration - Pressure Transducers (1 of 2)

<b>Suction Pressure</b> mA Reading: 5.139 mA Displayed: -0.12 PSIG Calibrated: 14.575 PSIA (14.575 PSIA)	Display PSIG PSIA kPa[A] kPa[G]	Transducer PSIG PSIA kPa[A] kPa[G]	Minimum 4.00 mA	Minimum 0.000 PSIA (0.000 PSIA)	+/- Offset 0.337 PSID (0.337 PSID)	Calibration Menu
			Maximum 20.00 mA	Maximum 200.000 PSIA (200.000 PSIA)	Target Value 14.700 PSID	Main Menu

**Discharge Pressure**  
 mA Reading: 4.530 mA  
 Displayed: 0.13 PSIG  
 Calibrated: 14.829 PSIA  
 (14.829 PSIA)

**Oil Manifold Pressure**  
 mA Reading: 4.564 mA  
 Displayed: 0.94 PSIG  
 Calibrated: 15.633 PSIA  
 (15.633 PSIA)

**Oil Filter Inlet Pressure**  
 mA Reading: 4.513 mA  
 Displayed: -0.75 PSIG  
 Calibrated: 13.949 PSIA  
 (13.949 PSIA)

NEXT

Log Out (MGR)

Select Language

Pressure Conversions

View Device Names

C01: Instrument Calibration - Pressure Transducers (2 of 2)

<b>Disch. Recycle Pressure</b> mA Reading: 0.004 mA Displayed: -118.22 PSIG Calibrated: -118.217 PSIG (-103.521 PSIA)	Display PSIG PSIA kPa[A] kPa[G]	Transducer PSIG PSIA kPa[A] kPa[G]	Minimum 4.00 mA	Minimum -14.696 PSIA (0.000 PSIA)	+/- Offset 0.000 PSID (0.000 PSID)	Calibration Menu
			Maximum 20.00 mA	Maximum 399.804 PSIG (414.500 PSIA)	Target Value -14.696 PSID	Main Menu

PREVIOUS

Log Out (MGR)

Select Language

Pressure Conversions

View Device Names

Confirm the “mA Reading” value (the raw mA value at the analog module) is correct and stable.

If not already done, set the Minimum mA to 4.00

If not already done, set the Maximum mA to 20.00

Set the Minimum Pressure to the actual minimum pressure at 4mA as marked on the transducer.

Set the Maximum Pressure to the actual maximum pressure at 20mA as marked on the transducer.

Set the Offset to zero unless required otherwise. The offset value adds to the resultant linearly scaled value and results in the Calibrated Value which is used for control. Alternatively, set the Target Value to desired/ actual Pressure. This will calculate the offset based on actual vs desired pressure.

## Instrument Calibration Motor Amps

**C01: Instrument Calibration - Compressor Motor Amperage**

To calibrate amperage:

1. Enter the minimum mA output of the transmitter (enter 4 for 4mA.)
2. Enter the maximum mA output of the transmitter (enter 20 for 20mA.)
3. Enter the minimum ratio value of the CT (enter 0 for 0 Amps.)
4. Enter the maximum ratio value of the CT (enter 400 for 400 Amps)
5. Only if required, enter an offset value.

Calibration Menu

Main Menu

Log Out (MGR)

View Device Names

Raw Minimum	Min Amps	Raw Data: 03.200 mA Calibrated: -6.3 Amps
4.00 mA	0.00 A	

Raw Maximum	CT Turns Ratio
20.00 mA	125 : 5

Offset
0.0 A

Select Language

Confirm the “mA Reading” value (the raw mA value at the analog module) is correct and stable.

If not already done, set the Minimum mA to 4.00. This is the minimum mA expected from the current transmitter at 0 motor amps.

If not already done, set the Maximum mA to 20.00. This is the maximum mA possible from the current transmitter.

Set the Minimum Ratio value of the current transformer. Enter a 0 for zero amps.

Set the Maximum Ratio value of the current transformer. For example, if the CT has a 250:5 rating, enter 250 as the Maximum Ratio value.

Set the Offset to zero unless required otherwise. The offset value adds to the resultant linearly scaled value and results in the Calibrated Value which is used for control.

# Instrument Calibration Temperatures

**C01: Temperature Calibration 1**

	Raw T Reading	Calibrated Value	+/- Offset
Suction Temperature	78.2 °F	78.2 °F	0.0
Discharge Temperature	75.1 °F	75.1 °F	0.0
Oil Separator Temperature	79.4 °F	79.4 °F	0.0
Oil Injection Temperature	77.7 °F	77.7 °F	0.0

Calibration Menu

Main Menu

Log Out  
(MGR)

View Device Names

Select Language

Temperature  
Calibration Page 2

To calibrate temperatures:  
 1. Log on for access.  
 2. Set an offset value if required. The calibrated value equals the raw value + the offset.

All RTDs are 100 ohm Pt and are scaled as such via hard-coded configuration in the PLC input module. The Raw T Reading is defined as the scaled value from the RTD input module.

Set the Offset to zero unless required otherwise. The offset value adds to the raw temperature reading scaled value to result in the Calibrate Value is used for control.

**C01: Temperature Calibration 1**

<b>Suction Temp.</b> mA Reading: 78.200 mA Displayed: 78.2 °F (78.2 °F)	Raw Min: 4.00 mA	Min Temp: 0.0 °F	+/- Offset 0.000 °F	<div style="background-color: #1a2b5a; color: white; padding: 5px 10px; margin-bottom: 5px;">Calibration Menu</div> <div style="background-color: #1a2b5a; color: white; padding: 5px 10px; margin-bottom: 5px;">Main Menu</div> <div style="background-color: #c00000; color: white; padding: 5px 10px; margin-bottom: 5px;">Log Out (MGR)</div> <div style="background-color: #1a2b5a; color: white; padding: 5px 10px; margin-bottom: 5px;">View Device Names</div> <div style="background-color: #ffff00; padding: 5px 10px; margin-bottom: 5px;">Select Language</div> <div style="background-color: #1a2b5a; color: white; padding: 10px 20px; display: inline-block; margin-top: 20px;">Temperature Calibration Page 2</div>
	Raw Max: 20.00 mA	Max Temp: 150.0 °F		
<b>Discharge Temp.</b> mA Reading: 79.400 mA Displayed: 79.4 °F (79.4 °F)	Raw Min: 4.00 mA	Min Temp: 0.0 °F	+/- Offset 0.000 °F	
	Raw Max: 20.00 mA	Max Temp: 300.0 °F		
<b>Oil Separator Temp.</b> mA Reading: 79.100 mA Displayed: 79.1 °F (79.1 °F)	Raw Min: 4.00 mA	Min Temp: 0.0 °F	+/- Offset 0.000 °F	
	Raw Max: 20.00 mA	Max Temp: 300.0 °F		
<b>Oil Injection Temp.</b> mA Reading: 77.700 mA Displayed: 77.7 °F (77.7 °F)	Raw Min: 4.00 mA	Min Temp: 0.0 °F	+/- Offset 0.000 °F	
	Raw Max: 20.00 mA	Max Temp: 300.0 °F		
<b>Oil Cooler Return Temp.</b> mA Reading: 75.100 mA Displayed: 75.1 °F (75.1 °F)	Raw Min: 4.00 mA	Min Temp: 0.0 °F	+/- Offset 0.000 °F	
	Raw Max: 20.00 mA	Max Temp: 300.0 °F		

To calibrate temperatures:  
 1. Log on for access.  
 2. Set an offset value if required. The calibrated value equals the raw value + the offset.

## Instrument Calibration Temperatures

Optional Temperature Transducers can be used in place of standard RTDs.

Confirm the “mA Reading” value (the raw mA value at the analog module) is correct and stable.

If not already done, set the Minimum mA to 4.00

If not already done, set the Maximum mA to 20.00

Set the Minimum Temperature to the actual minimum temperature at 4mA as marked on the transducer.

Set the Maximum Temperature to the actual maximum temperature at 4mA as marked on the transducer.

Set the Offset to zero unless required otherwise. The offset value adds to the resultant linearly scaled value and results in the Calibrated Value which is used for control.

**C01: Temperature Calibration 2**

Compressor Motor Temperatures	Raw T Reading	Calibrated Value	+/- Offset
Winding Phase A	79.8 °F	79.8 °F	<input type="text" value="0.0"/>
Winding Phase B	79.6 °F	79.6 °F	<input type="text" value="0.0"/>
Winding Phase C	79.4 °F	79.4 °F	<input type="text" value="0.0"/>
Bearing (Drive End)	78.7 °F	78.7 °F	<input type="text" value="0.0"/>
Bearing (Opposite Drive End)	78.8 °F	78.8 °F	<input type="text" value="0.0"/>

Calibration Menu

Main Menu

Log Out (MGR)


View Device Names

Select Language

Temperature Calibration Page 1

To calibrate temperatures:  
1. Log on for access.  
2. Set an offset value if required. The calibrated value equals the raw value + the offset.

# Oil Mixing Valve

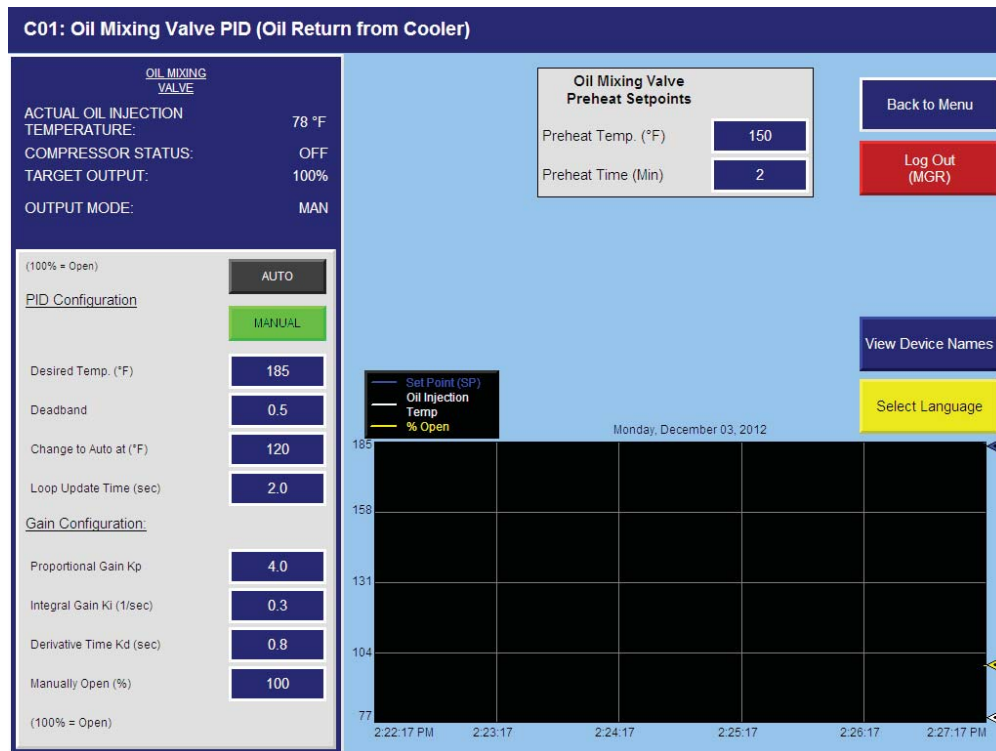

Various types of oil coolers can be used to maintain the oil injection temperature, usually either a water-cooled shell-&-tube heat exchanger mounted locally or a remotely located air-cooled fan-coil unit. In either case, the oil temperature control valve operates the same.

A two-way ball valve is located in the main oil line between the oil separator and the compressor. The oil cooler is piped in parallel to the oil temperature control valve, which acts as a by-pass valve.

## 1.0 Installation & Position Indication

- 1.1 The ball valve is installed with the ball closed.
- 1.2 The actuator mounts on the ball valve stem. Flats on the ball valve stem indicate the position of the ball:
  - OPEN – stem flats are with the flow
  - CLOSED – stem flats are across the flow
- 1.3 On smaller valves, the ball valve stem flats are nearly hidden between the stem extension and the stem lock nut. The locking tabs on the stem lock nut are across the flow.
- 1.4 The actuator position indicator stem flats are oriented in the same direction as the ball valve stem flats.
- 1.5 There is a mechanical position indicator on the top of the actuator cover.

NOTE: The oil temperature control valve comes from the vendor already assembled with the ball closed and the actuator in the CLOSED position.

## 2.0 Control Action

- 2.1 The ball valve can rotate through a full 360° arc.
- 2.2 The actuator restricts the ball to a 90° arc of travel.
- 2.3 The actuator is powered (120V or 24V) all the time.
- 2.4 The position target signal from the compressor controller is a 4-20mA analog value.
- 2.5 There is no feedback position from the actuator.

## Oil Mixing Valve

---

### 3.0 Initial Position

- 3.1 With the electrical power to the valve de-energized, the valve is set to its initial position by ensuring that the ball is in the closed position and that the actuator indicator displays CLOSED.
- 3.2 When the electrical power to the valve is energized, the valve should rotate to fully OPEN.

### 4.0 Operation

- 4.1 When initially installed, the ball must be in the closed position.
- 4.2 When electrically energized, if the compressor is not running, the compressor controller will turn the valve fully open (100%).
- 4.3 When the compressor starts, the valve remains fully open (100%) until the oil injection temperature rises above the control setpoint.
- 4.4 When the oil injection temperature rises above the control setpoint, the oil temperature control valve will begin to close.
- 4.5 The hot oil from the oil separator begins to divert to the oil cooler, mixing the hot and cooled oil flow streams together downstream of the oil temperature control valve. The valve can fully close (0%) diverting the entire oil flow stream to the oil cooler.
- 4.6 As the oil injection temperature drops below the setpoint, the oil temperature control valve begins to open so that the oil injection temperature does not become too cold.
- 4.7 When the compressor stops, the valve returns to fully open (100%).

### 5.0 Fail Position

The actuator remains in its last position when power is removed.

### 6.0 Screen Display

The oil temperature control valve, identified as “OIL MIX” on the main HMI display screen, shows a numerical value with “%” as units. This is to be understood as “% OPEN.” It is a direct indication of the position of the ball valve.

- 6.1 100% OPEN  
Oil flow stream is entirely bypassing the oil cooler
- 6.2 99% to 1% OPEN  
Oil flow stream is partially by-passing the oil cooler and partially diverted to the oil cooler
- 6.3 0% OPEN  
Oil flow stream is entirely diverted to the oil cooler

### 7.0 Control Settings

The oil temperature control setpoints are entered on the compressor controller screen “Oil Mixing Valve PID (Oil Return from Cooler)”.

### 8.0 Rotating the Actuator for Convenience of Installation

The actuator can be rotated to any one of four positions.

- 8.1 Remove both 120V and 24V power from the actuator.

## Oil Mixing Valve

---

- 8.2 Disconnect electrical leads at actuator.
- 8.3 Remove four cap screws that fasten the actuator to the valve mounting bracket.
- 8.4 Lift the actuator off the valve stem.
- 8.5 Rotate the actuator to the desired position.
- 8.6 Slide actuator down on the valve stem.
- 8.7 Secure the actuator to the valve mounting bracket with four cap screws.
- 8.8 Re-connect the electrical leads at the actuator.
- 8.9. Restore 120V and 24V power to the actuator.

NOTE: The ball valve and the actuator must always be assembled in the CLOSED position. See Section 3.0 Calibration above.

CAUTION: Be careful not to move the ball stem during this operation. Turning the ball valve 90° in either direction will reverse the control action of the valve and the compressor will experience high oil temperature within minutes. Turning the ball valve 180° has no detrimental effect.


### 9.0 Manual Override

The actuator has a handwheel that can be engaged to override the electrically determined position of the ball valve.

Push and rotate to engage.

Push a second time to de-clutch.

## Unit Start Screen (Start / Stop Logic)

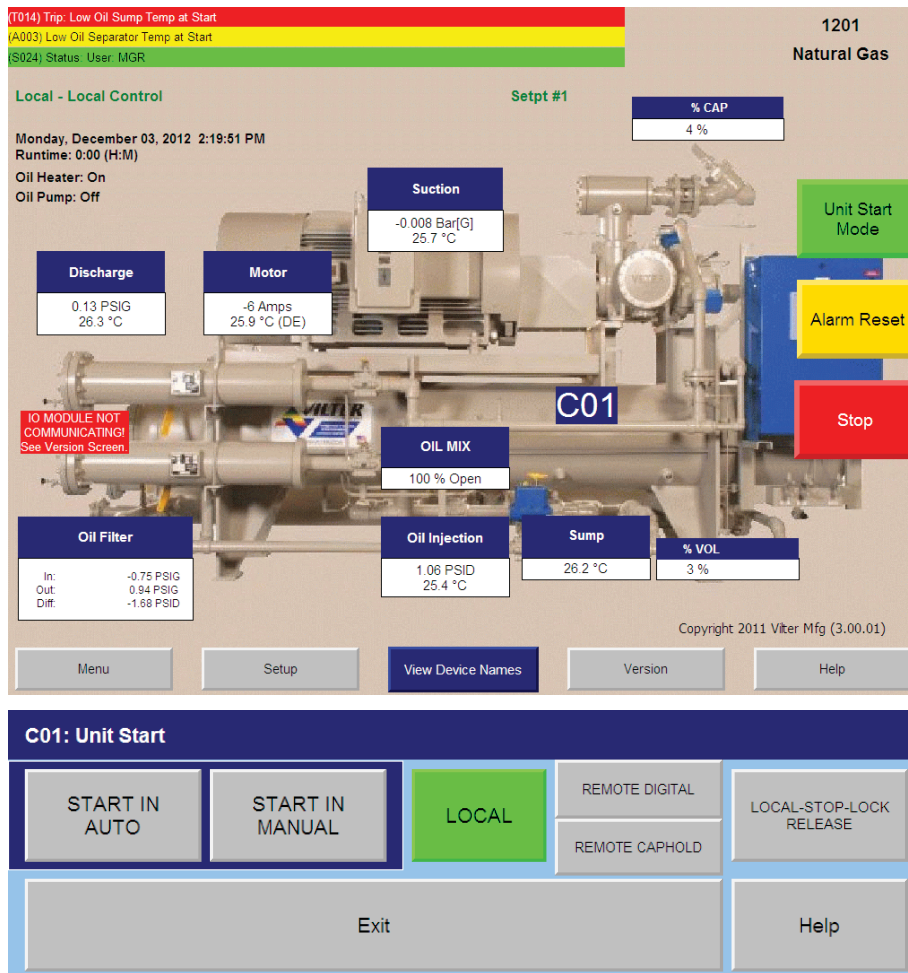

### Unit Start Button

Pressing this button will invoke a floating button panel, called Unit Start. The operational mode of the compressor unit can be selected from the Unit Start button panel. The compressor unit does not start when the green Unit Start button, on the main screen, is pressed.

### Unit Start Window

#### Local Button

The Local button is used to put the compressor controller into Local mode. This is the default mode for the compressor controller. In Local mode the compressor unit must be operated in Auto or Manual mode.





## Unit Start Screen (Start / Stop Logic)

---

### Start In Auto Button

In this mode the compressor will respond to its on-board settings for start, stop, load and unload commands.



### Start In Manual Button

In this mode the compressor will respond to operator inputs from the HMI screen. They Capacity and Volume Slide Valve Position can be adjusted by the up and down arrows that appear on the main screen. The Position is a value 0% to 100%.



### Remote Digital Button

The Compressor Controller must be in Local-Auto in order to activate Remote mode. In Remote Digital Mode the compressor is controlled by digital input signals.

1. Remote Start Input: Permissive Start/Stop for the compressor.
2. Remote Increase Input: Increases the Capacity Slide Valve.
3. Remote Decrease Input: Decrease the Capacity Slide Valve.



### Remote Capacity Hold Button

From Local mode, Remote Caphold button can be pressed to put the compressor controller in Central mode. Central mode allows for external capacity control via communications link.

### Central Mode

The remote PLC must maintain the Central mode operation by setting a tag in the compressor controller memory at least every 60 seconds. If the Central mode signal is lost during operation, the compressor controller reverts to Local Auto mode.

## Unit Start Screen (Start / Stop Logic)

---

### **Stop Button**

Pressing this button will stop the compressor unit. If the compressor unit is in Central mode when the Stop button is pressed, the compressor controller enters Local-Stop-Lock mode. The central system controller will no longer be able to command the compressor controller. To return to any operational mode, see the description of Local-Stop-Lock Release Button below.

NOTE: If the compressor unit does not stop, use the Emergency Stop button which is hardwired to the compressor controller. If this does not stop the compressor, then the main power disconnect must be opened.

### **Local-Stop-Lock Release Button**

If the Stop key is pressed when in Central mode, the controller goes into Local-Stop-Lock mode. In Local-Stop-Lock the controller prevents the compressor from being remotely started. Press Local-Stop-Lock Release to take the Controller out of Local-Stop-Lock mode. The controller must then be set to the desired mode from the Unit Start button.

### **Alarm Reset Button**

Pressing this button will reset the Alarms.

### **Exit Button**

Pressing this button will close the Unit Start box.

### **Help Button**

Pressing this button will open an additional help screen.

## Device Names

**DEVICE NAMES - 1**  
Assign unit-specific device names for the following devices.

	SENSOR	HI TRIP	HI ALARM	LO ALARM	LO TRIP
SUCTION PR	301-PT-001			PT	PT-1 [335]
DISCHARGE PR	301-PT-002	PT-2 [337]	PT-2 [337]		
FILTER INLET PR	303-PT-004				
MANIFOLD/FILTER OUT PR	303-PT-003				
SUCTION TEMP	301-TE-001			TE-1 [304]	TE-1 [304]
DISCHARGE TEMP	301-TE-004	TE-4 [307]	TE-4 [307]		
OIL SEPARATOR TEMP	303-TE-005			TE-5 [311]	TE-5 [311]
OIL INJECTION TEMP	303-TE-002	TE-2 [305]	TE-2 [305]	TE-2 [305]	TE-2 [305]
OIL RETURN TEMP*	303-TE-003				
PROCESS TEMP*	N/A		PT-02	PT-03	PT-04

DIGITAL INPUTS

AUX1	DIGS-00	MS1AUX	DIGS-01	LO LVL	DIGS-02	ENABLE	DIGS-03
REM INC	DIGS-04	REM DEC	DIGS-05	REMLOC	DIGS-06	IN 7	DIGS-07
IN 8	DIGS-08	IN 9	DIGS-09	AUX2	DIGS-10	IN 11	DIGS-11
IN 12	DIGS-12	IN 13	DIGS-13	IN 14	DIGS-14	IN 15	DIGS-15

\* Used only if these sensors exist on the unit.

Next Return Back to Menu

**DEVICE NAMES - 1**  
Assign unit-specific device names for the following devices.

	SENSOR	HI TRIP	HI ALARM	LO ALARM	LO TRIP
CAPACITY SLIDE POSITION	301-ZE-102				
VOLUME SLIDE POSITION	301-ZE-101				
MOTOR AMPERAGE	I-00	I-01	I-02		
PRELUBE OIL PR					OP-00
RUNNING OIL PR				OP-03	OP-04
FILTER DIFFERENTIAL PR		DIFFP-01	DIFFP-02		

NAME

EXTERNAL 4-20mA SIGNAL*	E-00
COMPRESSOR MOTOR	301-D-100
OIL MIXING VALVE*	303-TCV-001
OIL PUMP 1	303-P-100
OIL HEATER(S)	ANY-03
COMPRESSOR NAME	C01


\* Used only if these sensors exist on the unit.

Return Back to Menu

To change Device Name, go into the “Vilter Only” screen and press “Create Device Names.”

From the Device Name Screen, press the corresponding text window to change the name of the device.

## Calibration Procedure of Optical Actuators

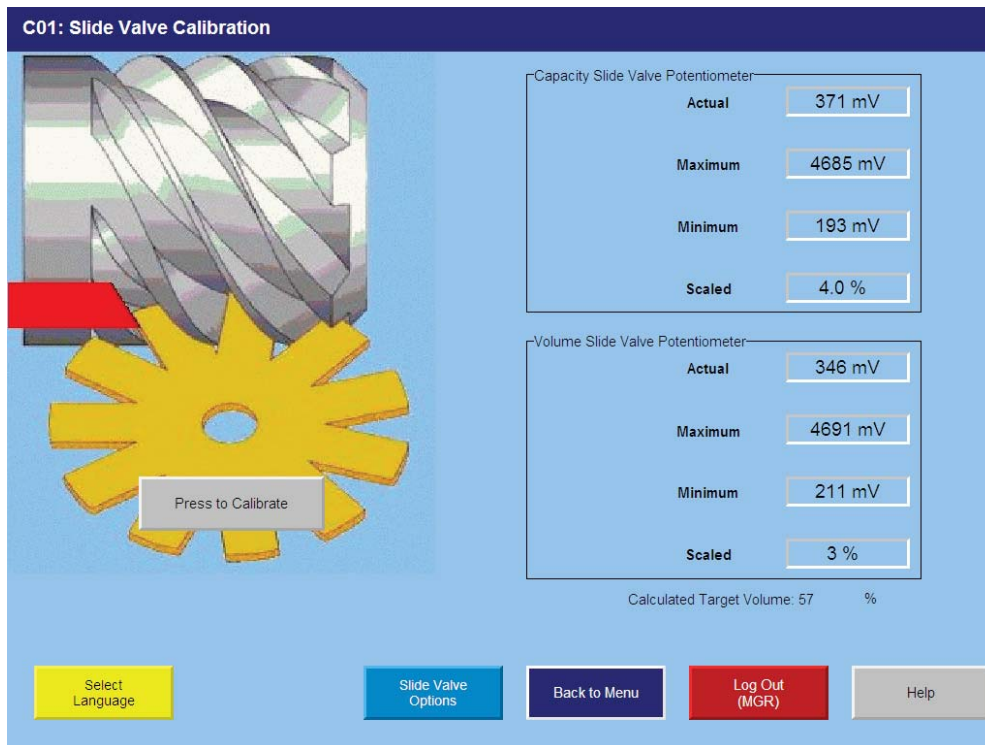


### ACTUATOR MOTOR CONTROL MODULE CALIBRATION PROCEDURE

1. Open the plastic cover of the capacity motor by removing the four #10 screws. **Cautio**n: there are wires attached to the connector on the plastic cover. Handling the cover too aggressively could break the wires.
2. Gently lift the cover and tilt it toward the Turck connectors. Raise the cover enough to be able to press the blue calibrate button and be able to see the red LED on the top of assembly.
3. Press "Menu" on the main screen and then press the "Slide Calibration" button, to enter the slide calibration screen. Logging on with high-level access will prompt the following buttons to appear: Press to Calibrate, Inc. and Dec. (Capacity and Volume.) Touch the Press to Calibrate button – it turns green and states "Calibrate." Set Min and Set Max buttons appear (Capacity and Volume.) If you are re-installing a new optical actuator reconnect the yellow and gray cables.
4. Press INC and DEC to move the slide valve and check for the correct rotation. See Table 1 for Actuator/command shaft rotation specifications.
5. Note: If the increase and decrease buttons do not correspond to increase or decrease shaft rotation, swap the blue and brown wires of the "power cable". This will reverse the rotation of the actuator/command shaft.
6. Quickly press and release the blue push button on the actuator one time. This places the actuator in calibration mode. The red LED will begin flashing rapidly.
7. Note: When the actuator is in calibration mode, it outputs 0V when the actuator is running and 5V when it is still. Thus, as stated earlier, the actuator voltage will fluctuate during calibration. After the actuator has been calibrated, 0V output will correspond to the minimum position and 5V to the maximum position.

## Calibration Procedure of Optical Actuators

8. Note: The “Slide calibration” screen on the Control Panel has a “Current” window, which displays twice the actuator output voltage. This value, (the % volume and the % capacity) displayed in the “Current Vol” and Current Cap” Windows are meaningless until calibration has been completed.
9. Use the DEC button on the Control panel to drive the slide valve to its minimum “mechanical stop” position. **Do not continue to run the actuator in this direction after the slide valve has reached the stop. Doing so may cause damage to the actuator or the slide valve.**

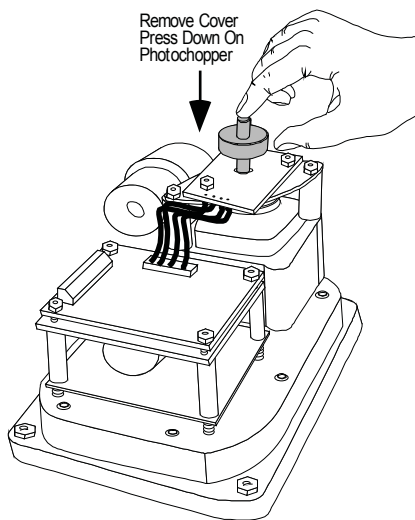

**Do not touch wires, may cause an electrical shock!**

Press down on the photochopper shaft to disengage the brake, releasing tension from the motor mount. Use the INC button to pulse the actuator to where the slide is just off of the mechanical stop and there is no tension on the motor shaft.

10. Quickly press and release the blue button on the actuator again. The red LED will now flash at a slower rate, indication that the minimum slide valve position (zero position) has been set.
11. Use the INC button on the Control Panel panel to drive the slide to its maximum “mechanical stop” position. **Do not continue to run the actuator in this direction after the slide valve has reached the stop. Doing so may cause damage to the actuator or the slide valve.** Press down on the photochopper shaft to disengage the brake, releasing tension from the motor mount. Use the DEC button to pulse the actuator to where the slide is just off of its mechanical stop and there is no tension on the motor shaft.
12. Quickly press and release the blue button on the actuator one more time. The red LED will stop flashing. The actuator is now calibrated and knows the minimum and maximum positions of the slide valve it controls. Now the capacity or volume channel of the PLC can be calibrated.
13. Use the DEC button to move the actuator towards its minimum position while watching the millivolt readout on the Control Panel screen. Discontinue pressing the DEC button when the millivolt reading the “Current” window above the “Set Min” button is approximately 500 millivolts.
14. Now use the DEC and INC buttons to position the slide valve until a value close to 300 millivolts is on the screen. Then, press the “Set Min” button in the capacity or volume slide valve window to tell the controller that this is the minimum millivolt position. Note: The value in the “Current Cap” or “Current Vol” window has no meaning right now.

## Calibration Procedure of Optical Actuators

---

15. Use the INC button to rotate the actuator towards its maximum position while watching the millivolt readout on the controller screen. Discontinue pressing the INC button when the millivolt reading in the “Current” window is approximately 4800 millivolts. You are nearing the mechanical stop position.
16. Pulse the INC button to carefully move the slide valve until the millivolt readout “saturates”, or stops increasing. This is around 4800 millivolts. Record millivolt maximum reading.
17. Pulse the DEC button until the millivolts just start to decrease. (This is the point where the channel drops out of saturation). Adjust millivolt value to 300 millivolts below recorded maximum millivolts in step #17.
18. Press the “Set Max” button.
19. Press the “Main” button to complete calibration and exit the “Slide Calibration” screen. The controller will automatically energize the actuator and drive it back to its minimum position (below 5%) for pre-start-up.
20. Note: Now the “Current Cap” or the “Current Vol” value will be displayed in the window on the “Main” screen and the “Slide Calibration” screen.
21. Gently lower the plastic cover over the top of the actuator to where it contacts the base and O-ring seal. After making sure the cover is seated properly, gently tighten the four #10 screws. **Caution: The plastic cover will crack if the screws are over tightened.**
22. Enable the “Slide Non-Movement Alarm” by going to the “Setup” menu and choosing “Alarm Enable” for the “Slide Non-Movement Option”.
23. This completes the calibration for this channel either capacity or volume. Repeat the same procedure to the other channel.

## Command Shaft Rotation and Travel

Compressor Model	Command Shaft Rotation				No. of Turns/Rotation			Angle/Slide Travel		
	Capacity		Volume		Capacity			Volume		
	INC	DEC	INC	DEC	Turns	Degrees	Travel	Turns	Degrees	Travel
VSSG 291 VSSG 341 VSSG 451 VSSG 601	CW	CCW	CW	CCW	0.91	328	3.568"	0.52	187	2.045"
VSG 301 VSG361 VSG 401	CW	CCW	CW	CCW	0.80	288	3.141"	0.45	162	1.767"
VSG 501 VSG 601 VSG 701	CCW	CW	CCW	CW	0.91	328	3.568"	0.52	187	2.045"
VSG 751 VSG 901	CCW	CW	CCW	CW	1.09	392	4.283"	0.63	227	2.473"
VSG 791 VSG 891 VSG 1051 VSG 1201	CCW	CW	CCW	CW	1.22	439	4.777"	0.74	266	2.889"
VSG 1551 VSG 1851 VSG 2101	CCW	CW	CCW	CW	1.48	533	5.823"	0.87	313	3.433"
VSG 2401 VSG 2601 VSG2801 VSG 3001	CCW	CW	CCW	CW	1.80	648	7.072"	1.36	490	5.341"

\*The large gear on the command shaft has 50 teeth. The teeth are counted when moving the command shaft from the minimum stop position to the maximum stop position.

The manual operating shaft on the gear motor should be turned the opposite direction of the desired command shaft rotation.

The capacity and volume control motors are equipped with a brake, if it is necessary to operate the control motors manually, the brake must be disengaged. The brake can be disengaged by pushing on the motor shaft on the cone end. The shaft should be centered in its travel. Do not use excessive force manually operating the motor or damage may result.

# Installation Instructions For Replacement Of Optical Actuator

---

**CAUTION: WHEN INSTALLING THE OPTICAL SLIDE MOTOR, LOOSEN LOCKING COLLAR BEFORE SLIDING THE COLLAR DOWN THE SHAFT. DO NOT USE A SCREWDRIVER TO PRY LOCKING COLLAR INTO POSITION.**

## OVERVIEW

Calibration of an optical slide valve actuator is a two step process that must be done for each actuator installed on the compressor. The steps are as follows.

1. The actuator motor control module, located inside the actuator housing, is calibrated so that it knows the minimum and maximum rotational positions of the slide valve it controls. The calibrated actuator will output 0 VDC at the minimum position and 5 VDC at maximum position.
2. After the actuator motor control module has been calibrated for 0-5 Volts, the controlling channel corresponding to the actuator motor (either the capacity or volume) has to be calibrated. This instructs the PLC to learn the rotational 0% position & rotation 100% position of the slide valve travel.

### ***Please Note:***

***Because there is an optical sensor on this motor, DO NOT attempt to calibration in direct sunlight.***

3. Before applying power to the PLC disconnect the gray and yellow cable.
4. Power the PLC back on.
5. Refer to **Calibration Procedure of Optical Actuators.**



## Slide Valve Actuator Theory of Operation

---

### Slide Valve Actuator Theory of Operation

The slide valve actuator is a gear-motor with a position sensor. The motor is powered in the forward and reverse directions from the main computer in the control panel. The position sensor tells the main computer the position of the slide valve. The main computer uses the position and process information to decide where to move the slide valve next.

The position sensors works by optically counting motor turns. On the shaft of the motor is a small aluminum “photochopper.” It has a 180 degree fence that passes through the slots of two slotted optocouplers. The optocouplers have an infrared light emitting diode (LED) on one side of the slot and a phototransistor on the other. The phototransistor behaves as a light controlled switch. When the photochopper fence is blocking the slot, light from the LED is prevented from reaching the phototransistor and the switch is open. When photochopper fence is not blocking the slot, the switch is closed.

As the motor turns, the photochopper fence alternately blocks and opens the optocoupler slots, generating a sequence that the position sensor microcontroller can use to determine motor position by counting. Because the motor is connected to the slide valve by gears, knowing the motor position means knowing the slide valve position.

During calibration, the position sensor records the high and low count of motor turns. The operator tells the position sensor when the actuator is at the high or low position with the push button. Refer to the calibration instructions for the detailed calibration procedure.

The position sensor can get “lost” if the motor is moved while the position sensor is not powered. To prevent this, the motor can only be moved electrically while the position sensor is powered. When the position sensor loses power, power is cut to the motor. A capacitor stores enough energy to keep the position sensor circuitry alive long enough for the motor to come to a complete stop and then save the motor position to non-volatile EEPROM memory. When power is restored, the saved motor position is read from EEPROM memory and the actuators resumes normal function

This scheme is not foolproof. If the motor is moved manually while the power is off or the motor brake has failed, allowing the motor to free wheel for too long after the position sensor loses power, the actuator will become lost.

A brake failure can sometimes be detected by the position sensor. If the motor never stops turning after a power loss, the position sensor detects this, knows it will be lost, and goes immediately into calibrate mode when power is restored.

## Slide Valve Actuator Troubleshooting Guide

Problem	Reason	Solution
The actuator cannot be calibrated or exit calibration mode	Dirt or debris is blocking one or both optocoupler slots	Clean the optocoupler slots with a Q-Tip and rubbing alcohol.
	The photochopper fence extends less than about half way into the optocoupler slots	Adjust the photochopper so that the fence extends further into the optocoupler slots. Make sure the motor brake operates freely and the photochopper will not contact the optocouplers when the shaft is pressed down.
	The white calibrate wire in the grey Turck cable is grounded	Tape the end of the white wire in the panel and make sure that it cannot touch metal
	Dirt and/or condensation on the position sensor boards are causing it to malfunction	Clean the boards with an electronics cleaner or compressed air.
	The calibrate button is stuck down	Try to free the stuck button.
	The position sensor has failed	Replace the actuator.
	Push button is being held down for more than $\frac{3}{4}$ second when going through the calibration procedure	Depress the button quickly and then let go. Each $\frac{3}{4}$ second the button is held down counts as another press.
The actuator goes into calibration mode spontaneously	The white calibrate wire in the grey Turck cable is grounding intermittently	Tape the end of the white wire in the panel and make sure that it cannot touch metal.
	A very strong source of electromagnetic interference (EMI), such as a contactor, is in the vicinity of the actuator or grey cable	Tape the end of the white wire in the panel and make sure that it cannot touch metal. Install additional metal shielding material between the EMI source and the actuator or cable.
	There is an intermittent failure of the position sensor	Replace the actuator.
The actuator goes into calibration mode every time power is restored after a power loss	The motor brake is not working properly (see theory section above.)	Get the motor brake to where it operates freely and recalibrate.
The actuator does not transmit the correct position after a power loss	The motor was manually moved while the position sensor was not powered.	Recalibrate.
	The motor brake is not working properly	Get the motor brake to where it operates freely and then recalibrate.
	The position sensor's EEPROM memory has failed	Replace the actuator.

## Slide Valve Actuator Troubleshooting Guide

Problem	Reason	Solution
The actuator does not transmit the correct position after a power loss	The motor was manually moved while the position sensor was not powered.	Recalibrate.
	The motor brake is not working properly	Get the motor brake to where it operates freely and then recalibrate.
	The position sensor's EEPROM memory has failed	Replace the actuator.
There is a rapid clicking noise when the motor is operating	The photochopper is misaligned with the slotted optocouplers	Try to realign or replace the actuator.
	The photochopper is positioned too low on the motor shaft.	Adjust the photochopper so that the fence extends further into the optocoupler slots.
	A motor bearing has failed	Replace the actuator.
The motor operates in one direction only	There is a loose connection in the screw terminal blocks	Tighten.
	There is a loose or dirty connection in the yellow Turck cable	Clean and tighten.
	The position sensor has failed	Replace the actuator.
	There is a broken motor lead or winding	Replace the actuator.
The motor will not move in either direction	The thermal switch has tripped because the motor is overheated	The motor will resume operation when it cools. This could be caused by a malfunctioning control panel. Consult the factory.
	Any of the reasons listed in "The motor operates in one direction only"	See above.
	The command shaft is jammed	Free the command shaft.
	Broken gears in the gearmotor	Replace the actuator.
The motor runs intermittently, several minutes on, several minutes off	Motor is overheating and the thermal switch is tripping	This could be caused by a malfunctioning control panel. Consult the factory.
The motor runs sporadically	Bad thermal switch	Replace the actuator.
	Any of the reasons listed in "The motor will not move in either direction"	See above.
The motor runs but output shaft will not turn	Stripped gears inside the gear motor or the armature has come unpressed from the armature shaft	Replace the actuator.

## Slide Valve Actuator LED Blink Codes\*

Flash Pattern	Meaning
*=ON _=OFF	
* * * * * _ _ _ _ _	Calibration step 1
*   *   *   *   * _   _   _   _   _	Calibration step 2
*   * _   _	<p>This indicates a zero span. This error can only occur during calibration. The typical cause is forgetting to move the actuator when setting the upper limit of the span. If this is the case, press the blue button to restart the calibration procedure. This error can also occur if either or both of the slotted optocouplers are not working. If this is the case, the slide valve actuator will have to be replaced.</p> <p>The operation of the slotted optocouplers is tested as follows:</p> <ol style="list-style-type: none"> <li>1. Manually rotate the motor shaft until the aluminum photochopper fence is not blocking either of the optocoupler slots.</li> <li>2. Using a digital multi-meter, measure the DC voltage between terminal 3 of the small terminal block and TP1 on the circuit board (see Note 1). You should measure between 0.1 and 0.2 Volts.</li> <li>3. Next, measure the DC voltage between terminal 3 and TP2 on the circuit board. You should measure between 0.1 and 0.2 Volts.</li> </ol>
* _	<p>This indicates a skipped state in the patterns generated by the optocouplers as the motor moves. This error means that the slide valve actuator is no longer transmitting accurate position information. The actuator should be recalibrated as soon as possible. This code will not clear until the actuator is recalibrated.</p> <p>This code can be caused by:</p> <ol style="list-style-type: none"> <li>1. The motor speed exceeding the position sensors ability to measure it at some time during operation. A non-functioning motor brake is usually to blame.</li> <li>2. The actuator is being operated where strong infrared light can falsely trigger the slotted optocouplers, such as direct sunlight. Shade the actuator when the cover is off for service and calibration. Do not operate the actuator with the cover off.</li> </ol>

## Slide Valve Actuator LED Blink Codes\*

Flash Pattern	Meaning
<p>*   *   *</p> <p>—   —   —</p>	<p>The motor has overheated. The actuator motor will not run until it cools. Once the motor cools, the actuator will resume normal operation.</p> <p>Motor overheating is sometimes a problem in hot and humid environments when process conditions demand that the slide valve reposition often. Solutions are available; consult your Vilter authorized distributor for details.</p> <p>Another possible cause for this error is a stuck motor thermal switch. The thermal switch can be tested by measuring the DC voltage with a digital multi-meter between the two TS1 wire pads (see Note 2). If the switch is closed (normal operation) you will measure 0 Volts.</p>
<p>*****</p>	<p>The 24V supply is voltage is low. This will occur momentarily when the actuator is powered up and on power down.</p> <p>If the problem persists, measure the voltage using a digital multi-meter between terminals 3 and 4 of the small terminal block. If the voltage is <math>\geq 24V</math>, replace the actuator.</p>
<p>*****</p> <p>—</p>	<p>The EEPROM data is bad. This is usually caused by loss of 24V power before the calibration procedure was completed. The actuator will not move while this error code is displayed. To clear the error, calibrate the actuator. If this error has occurred and the cause was not the loss of 24V power during calibration, possible causes are:</p> <ol style="list-style-type: none"> <li>1. The EEPROM memory in the micro-controller is bad.</li> <li>2. The large blue capacitor is bad or has a cracked lead.</li> </ol>
<p>*****</p> <p>—   —</p>	<p>Micro-controller program failure. Replace the actuator.</p>

\*There are two versions of slide valve actuators, version A and B. Only version B is able to display LED blink codes. Slide valve actuator version B can be distinguished by only having a single circuit board as supposed to two circuit boards in version A.

Note 1: TP1 and TP2 are plated-thru holes located close to the slotted optocouplers on the board. They are clearly marked on the board silkscreen legend.

Note 2: The TS1 wire pads are where the motor thermal switch leads solder into the circuit board. They are clearly marked on the board silkscreen legend and are oriented at a 45 degree angle.

## Safety Failure Message

Alarm time	Acknowledge time	Message
* 12/4/2012 12:24:30 PM		(1022) Trip: Faulted I/O Module Connection or Module Type
12/4/2012 12:24:30 PM		(1014) Trip: Low Oil Separator Temp at Start
* 12/4/2012 12:24:30 PM		(A030) Oil Fan VFD Fault Forced Bypass
* 12/4/2012 12:24:30 PM		(A003) Low Oil Separator Temp at Start

Active & Unacknowledged Alarm (Blink)	Active & Unacknowledged Trip (Blink)	Inactive & Unacknowledged Alarm or Trip
Active & Acknowledged Alarm	Active & Acknowledged Trip	Inactive & Acknowledged Alarm or Trip
Selected Alarm		
Back to Menu	Acknowledge Alarm	Acknowledge All Alarms
	▲	▼
		Alarm Reset

### ***Suction Pressure SP#1 Fail -***

This message will appear when the suction pressure falls below the safety setting of the Lo Suction Pressure Trip Setpoint No. 1. In addition, this message will appear when the suction pressure reading rises above 300 PSI, indicating an open transducer or bad analog channel.

### ***Suction Pressure SP#2 Fail -***

This message will appear when the suction pressure falls below the safety setting of the Lo Suction Pressure Trip Setpoint No. 2. In addition, this message will appear when the suction pressure reading rises above 300 PSI, indicating an open transducer.

### ***Discharge Pressure SP#1 Fail –***

This message will appear when the discharge pressure exceeds the safety setting of the Hi Dsch Press Trip Setpoint No. 1. In addition, this message will appear when the discharge pressure reading falls below 30” Hg, indicating a shorted transducer.

### ***Discharge Pressure SP#2 Fail –***

This message will appear when the discharge pressure exceeds the safety setting of the Hi Dsch Press Trip Setpoint No. 2. In addition, this message will appear when the discharge pressure reading falls below 30” Hg, indicating a shorted transducer.

### ***Suction Temp Fail –***

This message will appear when the suction temperature falls below the safety setting of the Low Suction Temperature Trip setpoint. In addition, this message will appear when the suction temperature rises above 400 degrees, indicating an open RTD.

### ***Discharge Temp Fail –***

This message will appear when the discharge temperature rises above the safety setting of the High Discharge Temperature Trip setpoint. In addition, this message will appear when the discharge temperature falls below -30 degrees, indicating a shorted RTD.

## Safety Failure Message

---

### ***Oil Separator Start Temp Fail –***

This message will appear when the Oil Separator Temp is below the Low Oil Separator Start Temp Trip setpoint. In addition this message will appear after the Oil Separator Temp Safety Changeover timer times out and the Oil Separator temperature fails to rise above the Low Oil Separator Start Temp Reset after the compressor is started.

### ***Oil Separator Run Temp Fail –***

This message will appear when the Oil Separator Temp is below the Low Oil Separator Run Temp Reset setpoint after the Oil Separator Temp Safety Changeover timer times out.

### ***Percent Capacity Fail –***

This message will appear if the percent capacity reading exceeds 300% or goes below –15%.

### ***Percent Volume Fail –***

This message will appear if the percent volume reading exceeds 300% or goes below –15%.

### ***Low Control Temperature Fail –***

This message will appear when the Process Control Temperature falls below the safety setting of the Low Control Temperature Trip Setpoint. In addition, this message will appear when the Process Control Temperature rises above 300 degrees F, indicating an open RTD.

### ***Low Start Oil Pressure Fail –***

This message will appear with the Prelube Oil Pressure (Manifold minus Discharge) has remained below the Prelube Oil Pressure Reset setpoint. The Prelube Oil Pressure must be above the Prelube Oil Pressure for a time period of the Minimum Compressor Prelube time. It will continue to try to do this for a time period of the Prelube Oil Pump Time Limit. When the Prelube Oil Pressure fails to achieve this, then the failure message will occur.

### ***Low Oil Pressure Fail –***

This message will appear when the Running Oil Pressure (Manifold minus Suction) has remained below the low Oil Pressure Reset setpoint when the Oil Pressure Bypass at Compressor Start timer times out. This message will also appear when the Running Oil Pressure falls below the Low Oil Pressure trip setpoint after the Oil Pressure Bypass at Compressor Start timer times out.

### ***Low Oil Injection Temp Fail –***

This message will appear when the Oil Injection temperature falls below the Low Oil Injection Temperature trip setpoint. This message will also appear when the Oil Injection temperature fails to rise above the Low Oil Injection Temperature reset setpoint after the Low Oil Injection Temp Bypass timer times out.

### ***Hi Oil Injection Temp Fail –***

This message will appear when the Oil Injection temperature rises above the High Oil Injection Temperature trip setpoint.

### ***Manifold Pressure Fail –***

This message will appear with the manifold pressure rises above 300 PSI or falls below 30" Hg.

## Safety Failure Message

---

***Filter Inlet Pressure Fail –***

This message will appear with the manifold pressure rises above 300 PSI or falls below 30" Hg.

***Start Filter Diff Press Fail –***

This message will appear if the Filter Differential pressure rises above the High Fltr Diff Press – Start setpoint before the Filter Differential Pressure Safety Changeover timer times out.

***Run Filter Diff Press Fail –***

This message will appear if the Filter Differential pressure rises above the High Fltr Diff Press Run setpoint after the Filter Differential Pressure Safety Changeover timer times out.

***Maximum Amperage Fail –***

This message will appear if the motor amperage rises above the Hi Motor Amps trip setpoint.

***Motor Starter Aux Contact Fail –***

This message will appear if the Motor Auxiliary contact fails to close before the Compressor Starter Auxiliary Contact Bypass timer times out. Refer to wiring diagram.

***Auxiliary Safety#1 Input Fail –***

This message will appear when power is removed from the input module that is designated as “Auxiliary #1 Safety” (please refer to your wiring diagram).

***Low Oil Separator Level Fail –***

This message may appear when power is removed from the input module that is designated as “Low Separator Oil Level Trip” (please refer to your wiring diagram). This safety has an associated delay. The associated delay timer is the Low Oil Separator Level Bypass Timer. This safety will activate only after the oil level has been low after the timer times out.



## Version Screen

This screen lists a hard-coded version description of the PanelView-Plus HMI file and active information regarding the ControlLogix processor.

Active Logix processor information are real-time statuses via the Ethernet link between the HMI and the Logix processor.

Logix processor information displayed:

1. Processor Name: Name assigned by Vilter to the Logix processor
2. Mode: Remote Run, Run, Program
3. Revision: Revision of the processor
4. Status: OK, Faulted

Date and Time of both the PanelView Plus unit and of the Logix processor are displayed here for operator or service technician use. Confirm that the dates and times of the HMI and Logix processor are equal. If unequal, follow instructions for setting the date and time from the Vilter Only screen.

Note: Access to the Vilter Only screen is password protected.

The screenshot displays the 'C01: Version' screen with a dark blue header and a light blue background. The Vilter logo is in the top right corner. The screen lists the following information:

HMI Version:	Copyright 2011 Vilter Mfg (3.00.01)		
Processor Name:	S140955_SALEKHARD_V3		
Mode:	Remote Program		
Revision:	Revision: 18.12		
Status:	OK		
HMI Date & Time:	12/04/2012 2:05:20.528 pm	14:05:20 *	
CLX Date & Time:	12/04/2012 09:41:24 *		

**CHECK IO MODULE COMMUNICATION WITH PROCESSOR**

IO MODULE COMMUNICATION STATUSES:

Slot 1:	Module is Waiting
Slot 2:	Module is Waiting
Slot 3:	Module is Waiting
Slot 4:	Module is Waiting
Slot 5:	Module is Waiting

Slot 5 IO status is valid only for units with an IO module at slot 5.  
Incorrect module types may appear as "Faulted."


\* 24 hour format

Copyright 2011 Vilter Mfg (3.00.01)

Buttons: 'Select Language' (yellow) and 'Back to Main' (dark blue).

## Trend Charts

The trend analysis screens display historic data of the last 300,000 records of analog values.

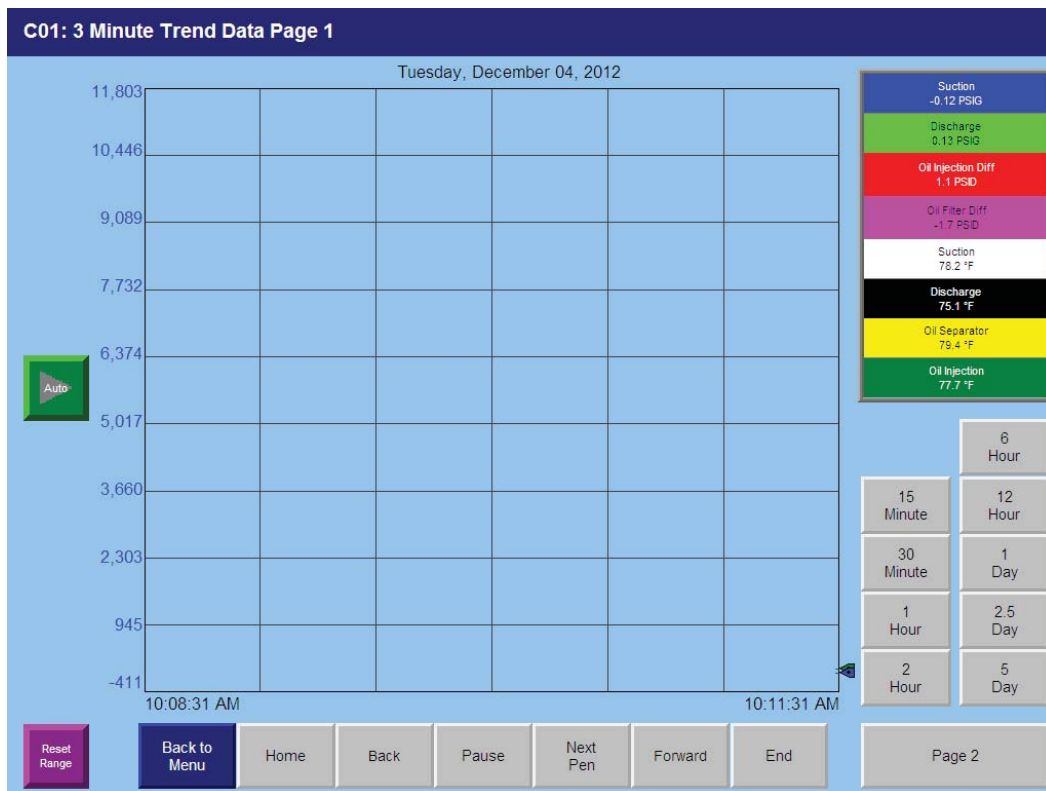

The following historical chart periods are available by touching the buttons along the right side of the screen: 3 minutes, 15 minutes, 30 minutes, 1 hour, 2 hours, 6 hours, 12 hours, 1 day, 2.5 days, 5 days. \*

**Back button:** Displays chart of previous period. For example, if the current 1 hour period is displayed and the time is 11AM, pressing the Back button will display the logged data from 9AM to 10AM.

**Forward button:** Displays the chart of the next period. For example, if the 1 hour period of 4PM to 5PM is displayed, pressing the Forward button will display the data of 5PM to 6PM provided that data exists.

**Home button:** Returns display from any displayed period to current period time with current time oriented to the left side of the chart. For example, if the real time is 7 PM and the chart is displaying the period of 7PM to 8PM. After pressing the End button, the chart will continue to update.

**End button:** Returns display from any displayed period to current period with current time oriented to the right side of the chart. For example, if the real time is 7PM and the chart is displaying the period of 1PM to 2PM, pressing the End button will display the period of 6PM to 7PM. After pressing the End button, the chart will continue to update with the time period moving later per real time.

**Pause button:** freezes the chart of period at the current time. Touch the Pause button again to activate the chart to update at the real time.

**Next Pen button:** Displays the individual scaling of each pen along the Y-axis of the chart. The scaling is colored the same as the pens which are shown on the chart legend. This is useful on Page 2 of the chart of motor amperage, capacity, and volume since the amp scale would typically require a larger range than 0-100 whereas the capacity and volume will remain within 0 to 100 (%). This allows the viewer to easily observe the relationship between data.

## Trend Charts

The standard values recorded are:

Pressures - displayed on page 1:

Suction Pressure	Displayed as a bold, solid blue line
Discharge Pressure	Displayed as a bold, solid bright-green line
Oil Injection Differential Pressure	Displayed as a bold, solid red line
Oil Filter Differential Pressure	Displayed as a bold, solid pink line


Temperatures - displayed on page 1:

Suction Temperature	Displayed as a dashed, white line
Discharge Temperature	Displayed as a dashed, dark-grey line
Oil Separator Temperature	Displayed as a dashed, yellow line
Oil Injector Temperature	Displayed as a dashed, dark-green line

Other Values - displayed on page 2:

Compressor Motor Amperage	Displayed as a bold, solid blue line
Capacity (%)	Displayed as a bold, solid bright-green line
Volume (%)	Displayed as a bold, solid red line

\* As a standard, values of 11 analog items are recorded every 15 seconds. This allocates 27,272 records of each item producing 4.73 days worth of historical data. Addition of items will decrease the total record period. Historical data is stored in the flash memory card located in the back of the PanelView HMI.

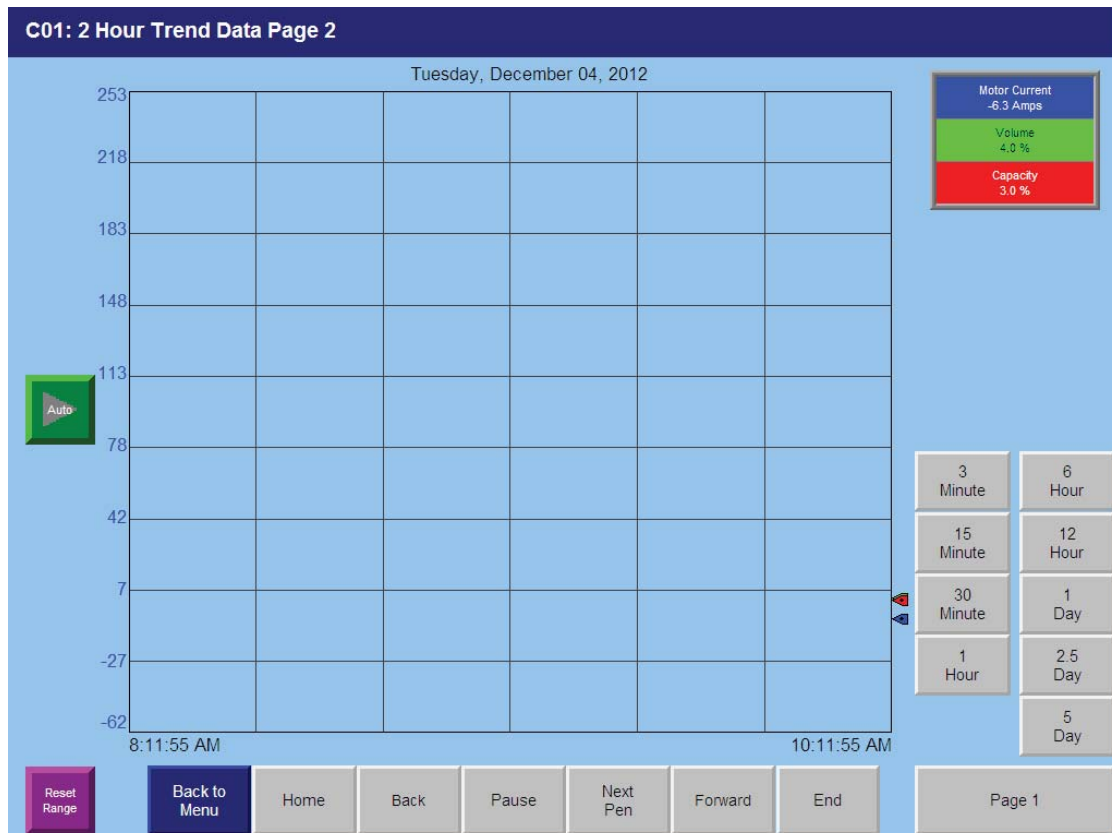

---

Troubleshooting:

Problem: Trend charts no longer display historical data but only update with real-time data which re-initializes each time the chart is displayed.

Cause: Time and/or Date of HMI was changed so logged data file cannot be sensible.

Solution: From the Vilter Only screen (password protected) Clear the log files of the PanelView.

- a. Touch or scroll to the File Management field then touch the Enter button.
- b. Touch or scroll to the Delete Files field, then touch the Enter button
- c. Touch or scroll to the Delete Log Files field and touch the Enter button.

***DO NOT DELETE APPLICATIONS! DO NOT DELETE FONTS!***

- d. Touch “Yes” to delete the log files.
- e. Touch the Close button twice to return to the Terminal Settings screen.
- f. Touch the Close button again to exit the Terminal Settings screen.
- g. Touch the Reset button then the Yes button to reset the PanelView

## Captured Data at Shutdown

C01: Captured Data at Shutdown		04-04-2012	04-03-2012	04-02-2012	03-22-2012	03-22-2012
		16.07.36	14.59.37	15.27.51	15.36.05	15.15.17
301-PT-001	Suction Pressure	57.1 PSIG	63.3 PSIG	65.9 PSIG	-0.7 PSIG	-0.7 PSIG
301-PT-002	Discharge Pressure	191.5 PSIG	178.0 PSIG	198.5 PSIG	2.8 PSIG	18.5 PSIG
303-PT-004	Filter In Pressure	177.8 PSIG	169.8 PSIG	188.1 PSIG	51.7 PSIG	48.0 PSIG
303-PT-003	Manifold Oil Pressure	181.4 PSIG	173.1 PSIG	191.3 PSIG	54.5 PSIG	50.8 PSIG
	Run Oil Pressure	120.7 PSID	106.4 PSID	122.1 PSID	52.4 PSID	48.8 PSID
	Filter Pressure Diff.	3.6 PSIA	3.3 PSIA	3.2 PSIA	2.8 PSIA	2.8 PSIA
	Pressure Ratio	2.9	2.5	2.6	1.3	2.4
301-TE-001	Suction Temp.	64.9 °F	75.9 °F	102.3 °F	73.5 °F	73.1 °F
301-TE-004	Discharge Temp.	212.7 °F	212.7 °F	250.0 °F	76.4 °F	73.8 °F
303-TE-005	Oil Sump Temp.	206.1 °F	209.2 °F	232.3 °F	96.6 °F	89.9 °F
303-TE-002	Oil Injection Temp.	186.5 °F	185.6 °F	194.6 °F	79.2 °F	71.5 °F
301-ZE-102	% Capacity	1 %	1 %	98 %	0 %	0 %
301-ZE-101	% Volume	58 %	54 %	3 %	-1 %	5 %
303-TCV-001	Oil Mixing Valve	43 %	45 %	30 %	100 %	100 %
301-D-100	Main Motor Amps	19.6 AMPS	18.2 AMPS	40.2 AMPS	14.4 AMPS	15.9 AMPS
	Phase A Temp.	0.4 °F	0.4 °F	0.4 °F	0.4 °F	0.4 °F
	Phase B Temp.	0.4 °F	0.4 °F	0.4 °F	0.4 °F	0.4 °F
	Phase C Temp.	0.4 °F	0.4 °F	0.4 °F	0.4 °F	0.4 °F
	DE Bearing Temp.	0.4 °F	0.4 °F	0.4 °F	0.4 °F	0.4 °F
	ODE Bearing Temp.	0.4 °F	0.4 °F	0.4 °F	0.4 °F	0.4 °F
	Oil Cooler Fan Speed	0 %	100 %	0 %	0 %	0 %

Back to Menu

Select Language

The Captured at Shutdown screen shows data captured prior to compressor shutdown.





EmersonClimate.com